

Updating your ASUS GK2000 firmware


1. Double -click **FWUpdate.exe**.

1. 双击 FWUpdate.exe

	devcon_32.exe	2002/11/14 下午 ...
	devcon_64.exe	2014/7/6 上午 02...
	FWUpdate.exe	2015/12/2 上午 1...
	GetOSVer.dll	2012/9/4 下午 09...
	GK2000.hex	2016/1/28 上午 1...
	HIDApi.dll	2011/9/5 上午 09...
	HidDevice.dll	2014/6/23 下午 0...
	info.ini	2015/12/3 下午 0...
	Information.txt	2016/2/2 上午 09...

2. On the FWUpdate app screen, click **Update** to start the update process. To restore your keyboard to its factory default settings, click **Default**.

2.在韧体更新画面下, 点选"Update" 开始更新程序. 点击"Default"可将键盘设定回复到出厂值.

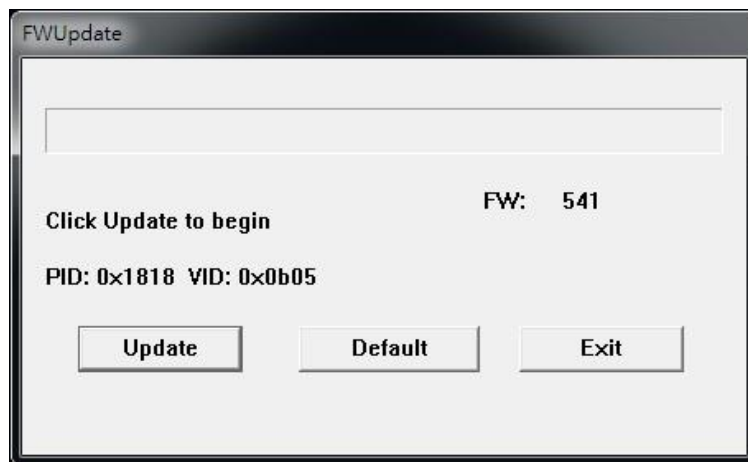


3. Wait until the update process is completed

WARNING! DO NOT disconnect your keyboard during the update process.

3. 请等待更新程序完成

警告! 更新时,请勿断开键盘.

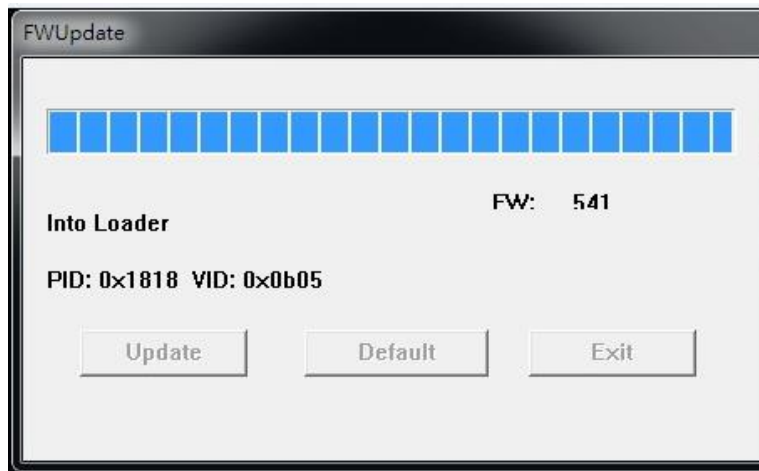

4. When the update process is completed, click **Exit** to close the FWUpdate app.
4. 刚更新程序完成后, 点击” Exit” 结束离开 FWupdate 软件. 并请重新插拔键盘!

