Z Stylus

E-Manual



COPYRIGHT INFORMATION

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTEK COMPUTER INC. ("ASUS").

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR FRROR IN THIS MANUAL OR PRODUCT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit without intent to infringe.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Copyright © 2015 ASUSTeK COMPUTER INC. All Rights Reserved.

LIMITATION OF LIABILITY

Circumstances may arise where because of a default on ASUS' part or other liability, you are entitled to recover damages from ASUS. In each such instance, regardless of the basis on which you are entitled to claim damages from ASUS, ASUS is liable for no more than damages for bodily injury (including death) and damage to real property and tangible personal property; or any other actual and direct damages resulted from omission or failure of performing legal duties under this Warranty Statement, up to the listed contract price of each product.

ASUS will only be responsible for or indemnify you for loss, damages or claims based in contract, tort or infringement under this Warranty Statement.

This limit also applies to ASUS' suppliers and its reseller. It is the maximum for which ASUS, its suppliers, and your reseller are collectively responsible.

UNDER NO CIRCUMSTANCES IS ASUS LIABLE FOR ANY OF THE FOLLOWING: (1) THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES; (2) LOSS OF, OR DAMAGET O, YOUR RECORDS OR DATA; OR (3) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF ASUS, ITS SUPPLIERS OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY.

SERVICE AND SUPPORT

Visit our multi-language web site at http://support.asus.com

Table of Contents

About this manual	4
Conventions used in this manual	5
Typography	5
Chapter 1: Getting started	
Getting to know your Z Stylus	8
Inserting the battery	10
Replacing the tip	11
Chapter 2: Using your Z Stylus	
Starting for the first time	14
Using the function buttons	14
Hovering your Z Stylus	15
Chapter 3: Working with your ZenPad	
Quick Launch Panel	18
Instant Page	19
Smart Crop	20
Working with SuperNote	21
Switching between drawing tools	22
Adding drawing tools to the library	
Deleting drawing tools from the library	
Using pen only mode	23
Appendices	
Notices	26

Z Stylus E-Manual 3

About this manual

This manual provides information about the hardware and software features of your Notebook PC, organized through the following chapters:

Chapter 1: Getting started

This chapter details the hardware components of your Z Stylus and shows you how to use the different parts.

Chapter 2: Using your Z Stylus

This chapter provides an overview of using your Z Stylus.

Chapter 3: Working with your ZenPad

This chapter shows you how to use your Z Stylus with the ZenPad.

Appendices

This section includes notices and safety statements for your Z Stylus.

Conventions used in this manual

To highlight key information in this manual, some text are presented as follows:

IMPORTANT! This message contains vital information that must be followed to complete a task.

NOTE: This message contains additional information and tips that can help complete tasks.

WARNING! This message contains important information that must be followed to keep you safe while performing tasks and prevent damage to your Notebook PC's data and components.


Typography

Bold = This indicates a menu or an item that must be selected.

Italic = This indicates sections that you can refer to in this manual.

Chapter 1: Getting started

Getting to know your Z Stylus

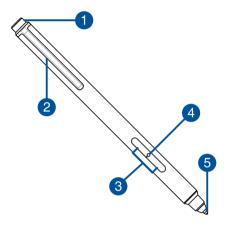

Stylus cap

Remove the stylus cap to insert the battery into the Z Stylus.

NOTE: For more details, refer to the *Inserting the battery* section in this manual.

2 Stylus pen clip

The Z Stylus features a pen clip that allows you to conveniently hook it over the top of a folder or into your pocket.

3 Function buttons

You can use these buttons to access additional functions in various apps. The $1^{\rm st}$ button is the button closer to the tip, and the $2^{\rm nd}$ button is the button closer to the clip.

NOTE: For more details, refer to *Using the function buttons* in this manual

4 LED power indicator

The LED power indicator will light up for three (3) seconds when you insert the battery. The LED power indicator also lights up when the battery is low.

6 Replaceable stylus tip

The stylus tip can be easily replaced with a replacement tip by using the tip removal tool.

 
NOTE: For more details, refer to the *Replacing the tip* section in this manual.

Inserting the battery

1. Remove the stylus cap.



2. Insert a AAAA battery (600 mAh), noting the correct polarity.



3. Return the stylus cap into place.



NOTE: Your Z Stylus will actively communicate with your ZenPad when it is in close contact with the screen. Ensure to keep your Z Stylus away from the screen when not in use to save battery life.

Replacing the tip

1. Press the tip removal tool to grab the tip.



2. Pull the tip out with the tip removal tool.



3. Insert a replacement tip into the stylus.



Chapter 2: Using your Z Stylus

Starting for the first time

Before using your Z Stylus for the first time, you will have to enable the Z Stylus feature on your ZenPad.

To enable the Z Stylus feature:

- Launch the Settings screen by doing any of the following: 1
 - Launch Quick settings then tap

 


- Tap -> Settings.
- 2. Scroll down the **Settings** screen and select **Z Stylus**.
- Slide Z Stylus to ON. 3.

NOTE: A notification icon will appear on the status bar to indicate the battery status of your Z Stylus.

Using the function buttons

The function buttons on your Z Stylus allows you to easily access the Quick Launch Panel, Smart Crop, and access additional functions on selected apps.



Hovering your Z Stylus

You can do various things and view additional content just by hovering your Z Stylus over your ZenPad. Hover your Z Stylus on the screen and a circle will appear to indicate where you are pointing.

Here are some things you can do with hovering:

- Hover over an icon or button to view its name.
- Hover over your email to preview the message.
- Hover over an app folder to preview the content.
- Hover over a video for a live preview.
- Hover over a calender event to view the details.
- Hover over the web address to view the browser history.
- Hover over a photo album to preview the content, or over a photo to enlarge it.
- Hover over the edge of the screen to scroll automatically.



Chapter 3: Working with your ZenPad

Quick Launch Panel

The Quick Launch Panel provides quick access to some of the special features of your ZenPad. Each of these features are represented by an icon.

To expand the Quick Launch Panel:

- 1. Hover your Z Stylus over your screen.
- 2. Press the 1st button on the Z Stylus to expand the Quick Launch



NOTE: You can customize the shortcuts on the Quick Launch Panel under Z Stylus Settings.

Instant Page

This feature allows you to capture your current screen and make notes on it straightaway.

To launch the Instant Page:

- Hover your Z Stylus over your screen. 1.
- 2. Press the 1st button on the Z Stylus to expand the Ouick Launch Panel.
- Select the icon to launch Instant Page. 3.



Z Stylus E-Manual

Smart Crop

Smart Crop allows you to perform a free-line crop or a rectangle crop of your ZenPad anywhere.


To perform a Smart Crop:

- 1. Hover your Z Stylus over your screen.
- 2. Press and hold the 1st button on the Z Stylus.
- Move your Z Stylus upwards to start a free-line crop, or move your Z Stylus downwards to start a rectangle crop.



Working with SuperNote

Your Z Stylus makes taking notes easier than ever before. Quickly switch between the drawing tools to take colorful notes, or switch to the eraser to remove unwanted areas.

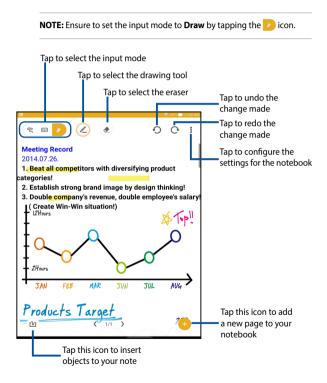

Z Stylus E-Manual

21

Switching between drawing tools

Switch between drawing tools by simply pressing a button.

To switch between drawing tools:


- 1. Hover your Z Stylus over your screen.
- Press the 2nd button on the Z Stylus to cycle between the drawing tools library and eraser.

Adding drawing tools to the library

You can add drawing tools to the library to conveniently switch between them using the Z Stylus.

To add drawing tools to the library:

- 1. Tap the 🗷 icon.
- 2. Select the brush color and thickness.

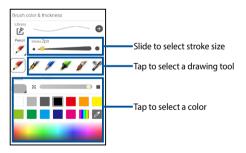

3. Tap the \odot icon to add the drawing tool to the library.

Deleting drawing tools from the library

To delete drawing tools from the library:

- 1. Tap the 🕢 icon.
- 2. Tap the $\lceil \frac{1}{2} \rceil$ icon to view the drawing tools in the library.



3. Tap the ● icon next to the drawing tool you want to remove from the library to remove it.

Using pen only mode

Use pen only mode to avoid accidentally drawing onto your notes with your hand or your palm.

To enable pen only mode:

- 1. Tap the i icon on the top right corner.
- 2. Tap the **Use pen only** check box to enable pen only mode.



Appendices

Notices

CE-EMC:

The EMC Directive also forbids affixing of marks that are similar to the CE marking, and also those that are likely to mislead third parties in relation to the meaning of the CE marking, e.g. by giving the impression that they are needed in order to have free access to a Member State's market. For apparatus under the EMC Directive, the CE marking is the only marking having regulatory effect regarding EMC within the European Community.

EN300330-1 V1.7.1, EN300330-2 V1.5.1, EN301489-1 V1.9.2, EN301489-3 V1.6.1, EN62311:2008.

FCC

EOUIPMENT AUTHORIZATION REQUIREMENT.

Devices operating below 490 kHz in which all emissions are at least 40 dB below the limits in §15.209 shall be verified pursuant to the procedures in Subpart J of part 2 of this chapter prior to marketing. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

	有害物质或元素					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr 6 +)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
控制板及器件	0	0	0	0	0	0
金属部件	0	0	0	0	0	0
塑料部件	0	0	0	0	0	0

VCCI

Class R ITF

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目 的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、 受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい.

VCCI-B

Translation:

This is a Class B product based on the standard of the VCCI Council. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

NCC

減少電磁波影響,請妥滴使用。

筆十二條 型式認證合格之低功率射頻雷機, 非經許可, 公司、商號或使用者 均不得擅白變更頻率、加大功率或變更原設計之特性及功能。

第十四條 功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有 干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。

前項合法通信,指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之 干擾。













ASUS Technical Support Information

ASUSTEK COMPUTER INC. (Asia Pacific)

Address: 15 Li-Te Road, Peitou, Taipei, Taiwan 11259

Website: www.asus.com.tw

Technical Support

Telephone: +886228943447
Support Fax: +886228907698
Online support: support.asus.com*

ASUS COMPUTER INTERNATIONAL (America)

Address: 800 Corporate Way, Fremont, CA 94539, USA

 Telephone:
 +15029550883

 Fax:
 +15029338713

 Website:
 usa.asus.com

 Online support:
 support.asus.com*

ASUS COMPUTER GmbH (Germany and Austria)

Address: Harkort Str. 21-23, D-40880 Ratingen, Germany

Fax: +492102959911
Website: www.asus.com.de
Online contact: www.asus.com.de/sales

Technical Support

Telephone (Component): +491805010923**

Telephone (System/

 Notebook/Eee/LCD):
 +491805010920**

 Fax:
 +492102959911

 Online support:
 support.asus.com*

- Available on this site is an online Technical Inquiry Form that you can fill out to contact technical support.
- ** EUR 0.14/minute from a German fixed landline; EUR 0.42/minute from a mobile phone.