



Type	Device Model	
USB 2.0	ASUS BS-F112 320G	FUJITSUWyo E 500GB
	Imation SOHOT PRO 320GB	Iomega eGo 500GB
	Seagate Free Agent Xtreme 1.5TB	TRANSCEND STOREJET 25F 500GB
	Vantec NST-D100	WD My Book Home 750GB
	HITACHI-LIFE STUDIO-1TB	WD ELEMENTS SE 1TB
USB 3.0	Agestar 3UB3A8 USB 3.0	Buffalo HD-PE640U3 640GB
	BuffaloSHD-PEHU3-BK SSD 64GB	CyberSlim S1-U3 Turbo
	CyberSlim S2-U3 Turbo	CYBERSLIM-S1-U3H USB3.0
	CYBERSLIM S2-U3 USB3.0	Sharkoon Rapid
	Sharkoon Quickport DUO	Sharkoon Rapid case 2.5
	iomegaeGo 2TB	Seagate-STAC2000300-2TB
	Seagate-STAC3000301-3TB	TRANSCEND TS640GSJ25D3
	WD-MY BOOK 3.0-1TB	CENDA C601U 5G 500GB
	WD My passport Essential SE 750GB	SILICON POWER10060946-640GA
	PQI H566	PQI S533-E
	Data-Tec U350SR-U3	Patriot Auntlet Enclosure SSD
	Ineo I-NA317+	UNITEK Y-1034
	UNITEK Y-1072	
SATA	HITACHI HDP725032GLA380 320GB	Samsung HD321KJ 320GB
	WD WD30EZRX 3TB	WD WD10EACS
	SAMSUNG HD103SJ 1TB	Seagate ST31000529AS
	WD 6400AAKS	WD 5000AAKS
	WD WD15EARS 1.5TB	SEAGATE ST3500320AS 500GB
ASUS Wireless Keyboard	W3000	
Wireless Mouse	GX800	WT400
	WT410	WT450
	WT460	WX-Lamborghini



- The Hard Disk Drive (HDD) Support list may change without prior notice.
- Turn off your O!Play TV PRO before removing the HDD. When the HDD is not properly removed, an error message appears. When this occurs, connect the HDD to a computer running on Windows® OS to rescan the HDD contents.

