 


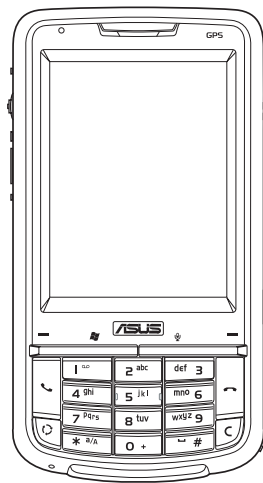

P526

User Manual



E3125

First Edition

May 2007

Copyright © 2007 ASUSTeK Computers, Inc. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUS Telecom ("ASUS").

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Table of Contents

P526 specifications	8
---------------------------	---

Package contents	9
------------------------	---

Chapter 1: Getting started

Getting to know your P526	12
---------------------------------	----

Layout	12
--------------	----

Device components description	14
-------------------------------------	----

Getting your device ready	16
---------------------------------	----

Installing the SIM card and battery	16
---	----

Charging the battery	18
----------------------------	----

Starting up	19
-------------------	----

Powering your device	19
----------------------------	----

Using the stylus	19
------------------------	----

Calibrating P526	20
------------------------	----

Locking the keys and buttons	20
------------------------------------	----

The Today screen	21
------------------------	----

Status indicators	22
-------------------------	----

Screen orientation	25
--------------------------	----

Start menu	26
------------------	----

Chapter 2: Entering data

Using the Input Panel	28
Using the Block Recognizer	28
Using the On-screen keyboard	29
Using the Letter Recognizer.....	30
Using T9 input.....	31
Using the Transcriber	32
Writing and drawing on the screen	33
Recording voice.....	34
Using ActiveSync™	36
Synchronizing via mini-USB.....	38
Synchronizing with Exchange Server.....	39
Setting the synchronization schedule.....	41
Searching information.....	42
Getting Help	43

Chapter 3: Phone features

Using phone.....	46
Phone pad.....	46
Adjusting the volume.....	46
Making a call	47
Using the alphanumeric keypad.....	47
Making calls from Contacts	49
Making calls from Call History.....	49

Using the Speed Dial	50
Using Voice Commander	51
Receiving a call.....	52

Chapter 4: Wireless features

Using the Wireless Manager.....	54
Using Bluetooth®.....	55
Overview	55
Activating Bluetooth in your device	55
Setting a GPRS connection.....	59
Connecting GPRS.....	62
Disconnecting GPRS	63
Using the GPRS Tool	64

Chapter 5: Multimedia features

Using the camera.....	67
Launching the camera.....	67
Camera mode screen.....	69
Taking photos.....	76
Video mode screen	77
Recording videos	82
Viewing pictures and videos	83
Viewing pictures and videos.....	83

Chapter 6: Other features

ASUS Launcher	86
Using the ASUS Launcher	86
ASUS CallFilter	87
Launching ASUS CallFilter	87
Using ASUS CallFilter	89
Remote Presenter	92
Using the Remote Presenter	92
Windows Live™	99
Signing up	99
Meeting Time Planner	104
Setting ring tone	105
Adding ring tone to selection	105
Changing the ring tone	106
Wake-up setting	107
Mode switcher	108
System information	109
Restoring default factory settings	110

Chapter 7: Device component status

ASUS status icon	112
USB setting	113
LCD Brightness	114

Battery	114
Memory	115
Storage card memory.....	115
Programs running in memory.....	116
Settings	116
Notices.....	118
Contact information.....	122

P526 specifications

Processor	TI OMAP 850
Operating System	Microsoft® Windows Mobile™ 6
Memory	128 MB NAND Flash ROM 64 MB SDRAM
Display	2.6-inch, 320 x 240 TFT Touchscreen Liquid Crystal Display (LCD) with 65,536 color and LED back-lighting
Frequency band	Quad-band GSM (850/900/1800/1900 MHz) Integrated GSM/GPRS/EDGE and GPS with internal antenna
GPS	Built-in SiRF star III chipset
GPRS	Class B, Multislot class 10
Camera	2.0 mega-pixel fixed focus camera
Connectivity	Bluetooth : V1.2 USB : USB Client 1.1
Battery capacity	1300 mAh Lithium Ion
Expansion slot	MicroSD card slot
Audio	2.5 mm audio port Built-in microphone and stereo output speaker
Weight	115g (with battery)
Dimension	110 x 58 x 15.4 mm
Talk time*	4 hrs (*vary with different networking environment and scenario)
Standby time*	150 hrs (*vary with different networking environment and scenario)

NOTE: Specifications are subject to change without notice.

Package contents

Check your P526 package for the following items:

- ✓ ASUS P526 device
- ✓ Battery
- ✓ AC Adapter
- ✓ Mini-USB cable
- ✓ Headset
- ✓ Stylus
- ✓ Car cell phone charger
- ✓ Car Kit (PDA holder and windshield suction pedestal)
- ✓ Protection case
- ✓ Getting Started CD
- ✓ User Manual
- ✓ Quick Start Guide
- ✓ Warranty Card

NOTE:

If any of the above items is damaged or missing, contact your retailer.

CAUTION:

- To reduce risk of fire, use only correct battery type. Refer to “Installing the SIM card and battery” section for details.
 - Do not attempt to disassemble the battery pack.
 - Dispose of used batteries properly. Inquire from local authorities for proper disposal of battery.
-

Chapter



Getting started

 
- Getting to know your P526
- Getting your device ready
- Starting up
- The Today screen

Getting to know your P526


Layout



Top features



Left side features

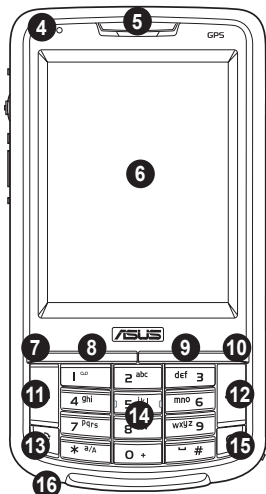 


Front features

Components:

- 1 Power button
- 2 Jog dial
- 3 OK button
- 4 Notification LED
- 5 Earpiece receiver
- 6 LCD touch screen
- 7 Left Soft key
- 8 Start button
- 9 Voice Commander/Record button
- 10 Right Soft key
- 11 Call key
- 12 End key
- 13 Mode switcher button
- 14 Alphanumeric keypad
- 15 Clear key
- 16 Mic

 Getting to know your P526

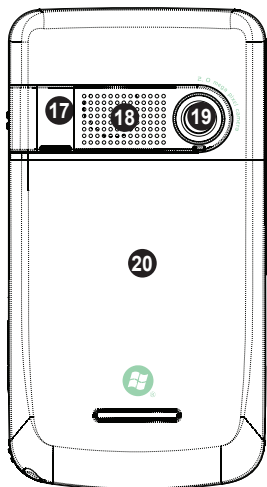

Rear features



Right side features



Bottom features

Components:

- 17** GPS antenna connector
- 18** Stereo speaker
- 19** Camera lens
- 20** Battery compartment
- 21** Hold button
- 22** Camera button
- 23** Reset button
- 24** MicroSD slot
- 25** Stylus
- 26** Headphone slot
- 27** Mini-USB connector

Device components description

No.	Item	Description
1	Power button	Press once to set suspend mode or to wake device from sleep mode. Press and hold to turn the power ON or OFF.
2	Jog dial	This three-direction jog dial allows you to conveniently navigate through menus without necessarily using the stylus.
3	OK button	Press to confirm a command or press to close/exit an open application.
4	Notification LED	This multi-color LED notifies the following: <ul style="list-style-type: none">• Green - Phone fully charged.• Flashing green - Network detected.• Red - Phone is charging.• Flashing red - Event notification.• Flashing blue - Bluetooth® or GPS is ON.
5	Earpiece receiver	Allows you to listen to incoming/outgoing calls.
6	LCD touch screen	This 2.6-inch, 65,536-color, 240 x 320-resolution, touchscreen TFT LCD allows you to write, draw, or make selections using the stylus.
7	Left Soft key	Performs the command indicated above the button.
8	Start button	Press to launch the Start menu.
9	Voice Commander/Record button	Press to launch the Voice Commander application. Press and hold to launch voice recording.
10	Right Soft key	Performs the command indicated above the button.
11	Call key	Press to receive an incoming call or to make a call.
12	End key	Press to end a call or a GPRS connection.
13	Mode/Task Switcher button	Allows you to switch applications and tasks.

Device components description

No.	Item	Description
14	Alphanumeric keypad	Allows you to input text and numbers.
15	Clear key	Press to clear input character to the left.
16	Mic	Used to make or receive phone calls, record sounds, record voice, or say voice commands.
17	GPS antenna connector	Allows you to install an external GPS antenna for better signal reception.
18	Stereo speaker	Allows you to listen audio media and phone calls.
19	Camera lens	2-megapixel fixed lens for taking pictures.
20	Battery compartment	Contains the battery that supplies power to the device.
21	Hold button	Slide to enable or disable all keys including the LCD touch screen.
22	Camera button	Press and hold over three seconds to launch the camera. In camera mode, press to take a picture. In video mode, press to start recording video and press again to stop.
23	Reset button	Using the stylus, press reset button to soft-reset your device.
24	Micro-SD slot	Insert a Micro-SD storage card into this slot.
25	Stylus	Use the stylus to write, draw, or select items on the touch screen.
26	Earphone port	Plug headset accessory to this port
27	Mini-USB connector	Use this connector to synchronize your data or to charge the battery.

Getting your device ready

Installing the SIM card and battery

Before you can make a phone call using your P526, you need to install a Subscriber Identity Module (SIM) card. A SIM card contains your phone number, subscriber details, phonebook, and additional phone memory.

Your P526 comes with a rechargeable Lithium-Ion battery.

New batteries come partially discharged and should be fully charged before using them. They generally do not reach their rated capacity until they have been charged and discharged at least four (4) times. We recommend that new batteries be charged overnight even though they may indicate that the charge is complete after a few hours. Sometimes charging may stop during the initial charge and it is necessary to remove the battery for approximately fifteen (15) minutes and then put it back on charge.

CAUTION:

 
Use only an ASUS qualified battery.

To install a SIM card and battery:


1. Remove the battery compartment cover.

NOTE:


When turned on, the device automatically turns off after you open the battery compartment to prevent data loss.

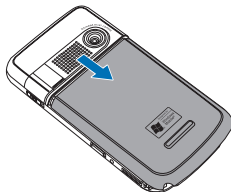

 
2. Remove the battery.

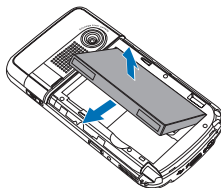

 
3. Insert the SIM card with its gold contacts facing down and the notched corner oriented to the upper left corner of the slot as shown.

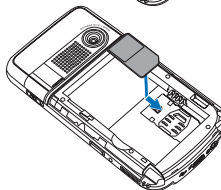

 4. Replace the battery into the compartment with its copper contacts properly aligned to the copper conductor on the device.

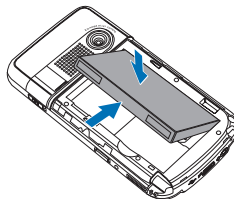

 5. Replace battery compartment cover.

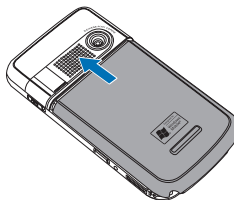


Charging the battery

The bundled battery pack is shipped partially charged. Charge the battery up to four (4) hours before using for the first time.

To charge battery:

 1. Connect the AC adapter plug to the mini-USB connector at the bottom of the device.
2. Connect the AC power plug to a grounded wall socket or power strip.

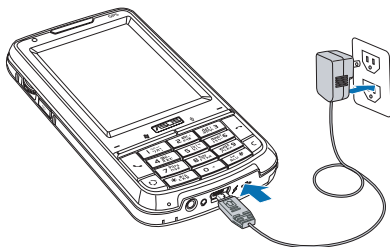

NOTE:

- The notification LED turns red and charging battery icon appears on the status bar indicating that the battery is charging.
 - If your battery gets totally discharged, you need to recharge it for at least twenty minutes before you can turn it back on.
-

Starting up

Powering your device

Make sure that your P526 is fully-charged before starting the device for the first time.

To turn on power:

1. Press and hold the power button.

 


2. Follow onscreen instructions to align screen and set the local time zone.

Using the stylus

The stylus is a pen-like device found behind the upper right corner of your P526.

- Use the stylus to write, draw, select, or drag an item on the screen.
- Single-tap an item to select it.
- Tap and hold an item to see a menu.



Calibrating P526

Calibrating your device ensures that the item you tap on the screen is activated. This involves tapping in the center of targets that appear in various coordinates on the screen.

To calibrate your screen:

 
1. Tap **Start > Settings > System** tab then tap **Screen** icon.
2. On the **General** tab tap **Align Screen** then follow succeeding calibration screen instructions.



Locking the keys and buttons

You can lock the keys and buttons of your device to avoid inadvertently dialing numbers or launching any application. To lock the keys and buttons:

1. Locate the Hold button on the right side of your device.
2. Slide the hold button downward to lock.
3. To unlock, slide the hold button upward.

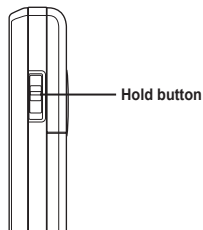

The Today screen

The Today screen displays information useful to you. You can configure the Today screen to have all the important information you need.





 







- To access the Today screen, tap **Start** > **Today**.
- To personalize the Today screen, tap **Start** > **Settings** > **Personal** tab > **Today**.

The following describes the common information found on the today screen:















Status indicators












Refer to the table below for the Today screen icon status indicators.

Icon	Description
	General Packet Radio Services (GPRS) available.
	Connecting via GPRS.
	Connected via GPRS.
	Connecting with ActiveSync
	ActiveSync connection not active.
	ActiveSync synchronization in progress.
	Synchronization error.
	Call forwarded.
	Call in progress.
	Call on hold.
	Missed call.
	New message.

Status indicators

Icon	Description
	New voice mail.
	No cellular phone service.
	No signal.
	Searching for cellular phone service.
	Indicates signal strength.
	Sound OFF.
	Sound ON.
	Battery low.
	Battery extremely low.
	Battery partially charged.
	Battery charging.
	Battery fully charged.

Status indicators

Icon	Description
	Searching Wi-Fi connection.
	Wi-Fi active.
	Roaming service. This icon appears only if you have international roaming feature.
	Vibrate or Meeting mode on.
	Bluetooth headset connected.
	Bluetooth head connected with sound.
	Appears when you set the alarm
	No SIM installed.
	Notice indicator. Tap to view notice.
	Pocket MSN service notification.
	Pocket MSN chat is online.

Screen orientation

You can set the screen to three different orientations:

1. Portrait
2. Landscape

Set to Portrait mode to get a better view or better operation of certain applications on your device. Set to Landscape when viewing pictures, video or viewing longer text files.

To change the screen orientation, tap **Start > Setting > System tab > Screen** then select the orientation you want.

You can also change the orientation by tapping the  icon.



Portrait mode



Landscape mode

Start menu

The Start menu contains various programs and applications that you commonly use.

Tap **Start** to display the start menu items:



Portrait mode



Landscape mode

You can also customize the items that appear in the Start menu.

To do this:

1. Tap **Start > Settings > Personal tab > Menus**.
2. Select the check boxes of the items you want to appear in the Start menu. You can select up to seven (7) items.



Chapter



Entering data

- Using the Input Panel
- Writing and drawing on the screen
- Recording voice
- Using ActiveSync™
- Synchronizing with Exchange Server
- Searching information
- Getting Help

Using the Input Panel

When you start an application or select a field that requires text, symbols, or numbers, the Input Panel icon appears on the menu bar. The Input Panel allows you to select various input methods including: Block Recognizer, Keyboard, Letter Recognizer, and Transcriber.

Using the Block Recognizer

The Block Recognizer allows you to use a single stroke to write letters, numbers, symbols, or punctuations, which are converted into typed text.

To use the Block Recognizer:

1. In an application, tap the Input Panel arrow, then tap **Block Recognizer**.
2. Write letters, numbers, symbols, or punctuations in the designated writing area.



- Write letters on the **abc** (left) area of the box.
- Write numbers on the **123** (right) area of the box.
- Tap the special symbols button to input symbols, punctuations and other special characters.
- Tap Help “?” button for help on how to write characters.

Input panel

Using the On-screen keyboard

With the on-screen keyboard, you can input text, symbols, numbers, or other special characters when input is possible.

To input text using the on-screen keyboard:

1. In an application, tap the Input Panel arrow, then tap **Keyboard**.
2. Input text by tapping keys on the on-screen keyboard.



Input panel

To enlarge the on-screen keyboard:

 
1. Tap the Input Panel arrow, then tap **Option**.
2. Select **Keyboard** from the Input Method list.
3. Tap **Large Keys**.

Using the Letter Recognizer

With the Letter Recognizer you can write individual letters, numbers, or special characters, which are converted into typed text.

To use the Letter Recognizer:

1. In an application, tap the Input Panel arrow, then tap **Letter Recognizer**.
2. Write letters, numbers, symbols, or punctuations in the designated writing area.
 - Write capital letters on the **ABC** (left) area of the box.
 - Write lower case letters on the **abc** (middle) area of the box.
 - Write numbers on the **123** (right) area of the box.
 - Tap the special symbols button to input symbols, punctuations and other special characters.
 - Tap Help "?" button for help on how to write characters.

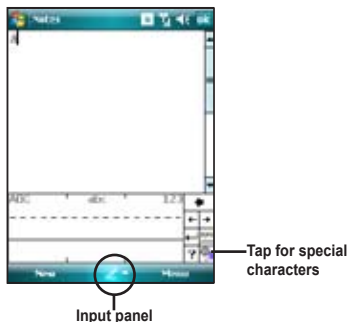


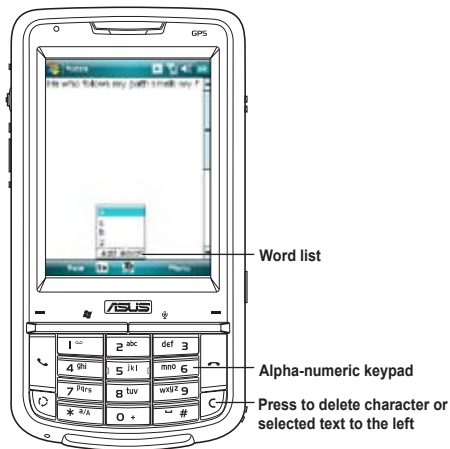 
Using T9 input

T9 allows you to enter text in alpha-numeric format. As you key in alpha-numeric texts on the keypad, T9 automatically matches your input with most likely the completed word.

To switch to T9 input, tap the Input Panel arrow, then tap **T9**.

T9 input shortcuts

- To key in a word or number, tap the keys on the keypad.
- To insert a word or number from the word list:
 - a. Use jog dial to move highlighted bar on word list.
 - b. Press jog dial to add selected word or number.
 - c. Press  to delete previous character or highlighted text.



Using the Transcriber

Transcriber is a handwriting recognition program that allows you to write in cursive, print, or mixed styles. It reliably recognizes not only written text but also numbers and symbols. Make sure to write legibly. See Help for more information on the Transcriber.


To use the Transcriber:

1. Start an application that accepts user input, such as Notes or Word Mobile.
2. Tap the Input Panel arrow, then tap **Transcriber**.

To write using Transcriber (using Notes):

1. Tap screen to position the cursor where you want the text to appear.
2. Use the stylus to write on the screen. The handwriting will be converted to text after you lift the stylus from the screen.

To edit text:

1. Draw a line across the text you want to edit. After you lift the stylus from the screen, the line will disappear and the selected text will be highlighted.
2. You can now rewrite the text or use the Transcriber gestures to edit your selected text. See Help  for the Transcriber gestures.




Tap for Help

Input panel


Writing and drawing on the screen

You can write or draw directly on the screen and save notes in your own handwriting. If you prefer to use your own handwriting or use drawings in your notes, set the default input mode to **Writing**. If you prefer text, set the default mode to **Typing**.

To set the default input mode for Notes:

1. Tap **Start > Programs > Notes**.
2. From the Notes list, tap **Menu > Options**.
3. In the **Default mode:** box, tap the down arrow and select any of the following:
 - **Writing** - if you want to draw or enter handwritten text in a note.
 - **Typing** - if you want to create a typed note.
4. Set the other options according to your preference.
5. Tap  when finished.

To write a note:

 
1. Tap **Start > Programs > Notes**.
2. From the Notes list, tap **New**.
3. Write your text on the screen.
4. When finished, tap  to return to the Notes list.

Recording voice


At any time, whether your phone is on stand-by or active mode, you can record sound, voice, or add a recording to a note while using your device.

To create a voice recording:

Press and hold the Voice Commander button to begin recording.

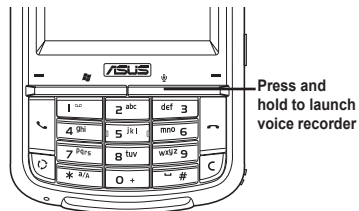


Or, you can follow the given steps:

1. Tap **Start > Programs > Notes**.
2. From the Notes list, tap **New**.
3. If you do not see the recording toolbar, tap **Menu > View Recording Toolbar**.
4. Tap the record icon to begin recording.
5. Place the receiver near your mouth or source of sound.
6. Tap the stop icon when finished recording. A recording icon appears on the note.
7. Tap .



To add a recording to a saved note:

1. Tap **Start > Programs > Notes**.
2. From the Notes list, tap to open a saved note.
3. If you do not see the recording toolbar, tap **Menu > View Recording Toolbar**.
4. Tap the record icon to begin recording.
5. Place the receiver near your mouth or source of sound.
6. Tap the stop icon when finished recording. A recording icon appears on the note.
7. Tap .

Using ActiveSync™

ActiveSync™ allows you to synchronize data in your device with data in your computer. ActiveSync can also synchronize over a wireless or cellular network with Microsoft Exchange Server, provided that your cellular phone service or company is running Microsoft Exchange Server with Exchange ActiveSync. When synchronized directly with Exchange Server, you can stay up to date even when your PC is turned off.

During synchronization, ActiveSync compares the data in your device with the data in your computer or Exchange Server, and updates all data with recent changes.

You can select and synchronize data in the following locations using ActiveSync:

- Contacts
- Calendar
- Email
- Tasks
- Notes
- Favorites
- Files
- Media

You can also exchange data between your computer and device without synchronizing.

ActiveSync is already installed in your device, but before you can synchronize data with your computer, you must first install ActiveSync in your computer. Install ActiveSync from the Microsoft Getting Started CD that came with your device package.

After you have installed ActiveSync, set up a sync relationship between your device and your computer. ActiveSync recognizes your device and automatically transfers the synchronization settings you have in your device.

If you wish to synchronize your device with Exchange Server through your company or service provider, obtain the name of the Exchange Server, user name, password, and domain name from your network administrator before starting the Sync Setup Wizard.

To install and configure ActiveSync in your computer:

1. Insert the Microsoft Getting Started CD that came with your device package.
2. Follow succeeding screen instructions.
3. After the setup is complete, the Sync Setup Wizard automatically starts when you connect your device to your computer. Follow screen instructions to complete the wizard.
4. From the Sync Setup Wizard, you can:
 - Configure an Exchange Server connection to synchronize directly with an Exchange Server. Acquire from your network administrator the required parameters for input.
 - Create a synchronization relationship between your computer and your device.
5. Select the information type that you want to synchronize.
6. After you finish the wizard, ActiveSync automatically synchronizes your device. You can disconnect the device after the synchronization is complete.

NOTE:

 
- When connected, your device is automatically synchronized with your computer. ActiveSync synchronizes everytime you make a change on either the device or computer.
 - You cannot use WLAN to synchronize database.
 - Refer to your Windows® Mobile Help, for more information about ActiveSync synchronization.
-

Synchronizing via mini-USB

You can connect to your device using the bundled mini-USB cable to synchronize to your computer.

To synchronize your device via mini-USB:

1. After installing ActiveSync to your computer, connect the mini-USB plug to the mini-USB connector at the bottom of the device.
2. Connect the other end of the USB cable to your computer. Upon connection, ActiveSync automatically synchronizes your device.

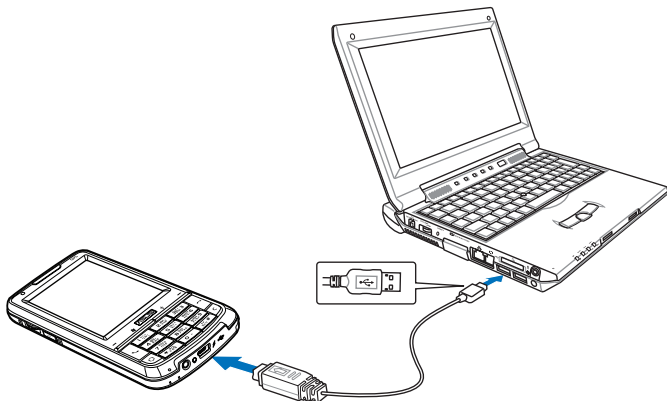

Synchronizing with Exchange Server

To synchronize your device with Exchange Server:

1. From the ActiveSync menu, tap **Menu > Add Server Source**.



2. In the **Server Address** field, input the name of the server running Exchange Server then tap **Next**.
If necessary, tap the check box **This server requires an encrypted (SSL) connection**.



3. Input your name, password, and domain then tap **Next**.



4. Tap the check boxes to select the data items that you want to synchronize with Exchange Server. To change the available synchronization settings, select a data item then tap **Settings**. Tap **Finish** when done.



5. Start the sync process.



Setting the synchronization schedule

To set the synchronization with Exchange Server:

1. From the ActiveSync screen, tap **Menu > Schedule**.



2. Refer to the table for input details.



Volume	Recommended setup
High	Select a shorter interval in the Peak times list.
Low	Select As items arrive option or a longer interval in the Off-peak times list.
While roaming	Check Use above settings while roaming .
Sending messages	Check Send outgoing items immediately .

Searching information

Using the search tool, you can search for files and other items stored in your device or the external MicroSD card. You can search by file name or by words located in various applications including the Calendar, Contacts, Excel Mobile, Word Mobile, Outlook Mobile, Help, Messages, Notes, and Tasks. You can also filter your search to files larger than 64 KB.

To search for a file or an item:

1. Tap **Start** > **Programs** > **Search**.
2. In **Search for** field, input the file name, word, or other information you want to search.
3. In **Type** field, select the data type to help you filter your search.
4. Tap **Search**. Found items are listed in Results.
5. In the Results list, tap the item with the information you need.



Getting Help

You can easily find Help for using any program on the device.

To get help for a program:

- From the Today screen or program, tap **Start > Help**.

A page will open with links to topics that explain how to use the program.



Chapter



Phone features

- Using the phone
- Making a call
- Receiving a call

Using phone

Like a standard cellular phone, you can use your P526 to make and receive calls. You can also keep a history of calls made and received, send SMS or MMS messages, take notes while talking, call from Contacts, and copy data from installed SIM card to your device.

Phone pad


The phone pad allows you to easily dial and access the Contacts, Call History, Speed Dial, and Phone settings. To launch the Phone pad, do any of the following:

- Tap **Start** > **Phone**.

- Press .

Adjusting the volume

To adjust the phone or device volume:

1. Tap  from the status bar.
2. From the volume menu, you can:
 - Move the slider to adjust device or phone volume.
 - Tap **On**, **Vibrate**, or **Off** to change the system and ringler volume settings.
 - Use the jog dial to adjust volume or set mode.



 
Making a call

You can make a phone call using the phone pad. You can also make calls directly from the Contacts, Call History, Speed Dial, or Voice Commander.

Using the alphanumeric keypad

To make a call using the alphanumeric keypad:

1. Ensure the device is not on hold.
2. Input the number of the party you want to call then press Call key.
If you pressed the wrong number, press Clear key to erase number to the left.
3. Talk to the called party when connected.
4. When finished, press End key to end the call.

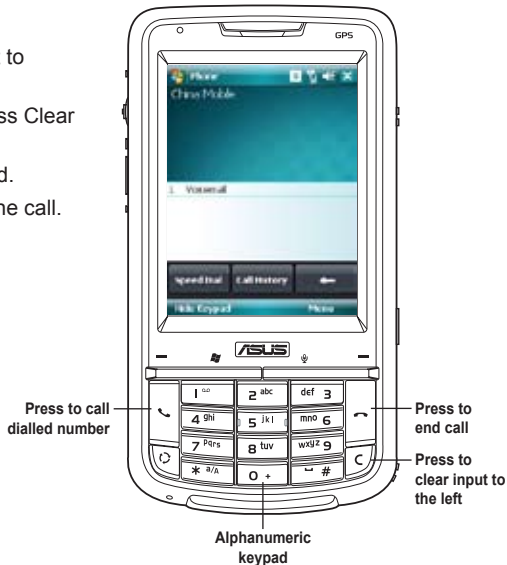

Phone pad features



Using Smart dialer


Smart Dialer utilizes the predefined alphabets or letters assigned to keys 2, 3, 4, 5, 6, 7, 8, and 9. Example: **2** ^{abc} has letters a, b, and c. **def 3** has d, e, f; and so on. Following the sequence of keys pressed, Smart Dialer displays items from your Contacts or previous calls containing the alphabets of the pressed key.

As shown in the example, keys **3**, **4**, and **2** were pressed, so all items beginning with the letter d, e, or f; items whose second letter is g, h, or i; and items whose third letter is a, b, or c are displayed.



Making calls from Contacts

To make a call directly from Contacts:

1. Press the Right Soft key or from the Today screen, tap **Contacts**.
2. You can do any of the following to make a call:
 - Tap name of contact, then from the Contacts screen, tap **Call**.
 - Tap name of contact, then press .
 - You can also tap and hold the contact, and from the shortcut menu tap **Call Work**, **Call Home**, or **Call Mobile**.
 - Tap **Enter a name...** then input the name or number you want to call from Contacts. Tap **Call** or press the Left Soft Key to dial the selected item.

Making calls from Call History

To make a call from the call history:

1. Tap **Start > Phone**.
2. On the Phone pad, tap the **Call History** button.
3. Scroll to the desired contact or phone number, then tap **Call**.

 
To look for more numbers in other categories, tap **Menu > Filter** and tap a category.

You can also launch **Call History** from the Today screen by pressing the Left Soft Key.



Call History button

Using the Speed Dial

With Speed Dial you can call frequently dialled numbers in a single press. For example, if you assign a contact to the number 2 button in Speed Dial, you can simply press and hold  to dial the contact's number.

To create a Speed Dial entry:

1. Make sure that the entry you want to create is already in the Contacts list.
2. Tap **Start > Phone**.
3. Tap the **Speed Dial** button on the Phone pad.
4. Tap **Menu > New**.
5. Tap a contact from the list then tap **Select**.
6. In the **Location** box, select an available key then tap **OK**.

To delete a Speed Dial entry:


- In the Speed Dial list, tap and hold an entry then tap **Delete**.

Using Voice Commander

To make a phone call using voice commander:

1. Press the Voice Commander button beside the Right Soft key.
2. From the following screen, your device asks you to "Say command."
3. Audibly say "Call" then the name to call from your Contact list.
4. Say "Yes" or "No" after the confirmation question.

If you said "Yes", the application proceeds and dials the number; otherwise, it returns to the Voice Commander menu.

5. Say "Goodbye" or tap  to exit Voice Commander.



Press to
launch Voice
Commander

NOTES:

To use Voice Commander while using a headset, press the answer button* on the headset then follow given instructions. (* Answer button may not be available in some headset models.)

Receiving a call

 
When you receive a call, a message prompts and allows you to answer or reject the incoming call.

To answer or reject an incoming call:

- To answer a call tap **Answer**, or press Call key.
- To reject an incoming call, tap **Ignore**, or press End key.

TIP:

Press and hold Call key to switch receiver to speakerphone mode.

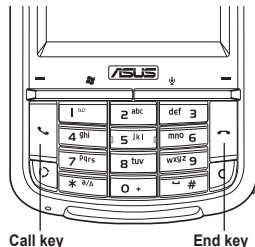


The following pop-up screen appears during an incoming call:

- Tap **Answer** to receive call or
- Tap **Ignore** to dismiss call.

To terminate a call:

 - Tap **End** or press End key to terminate an incoming or outgoing call.

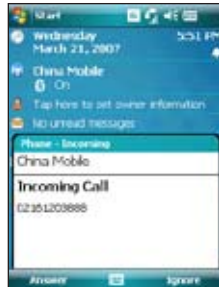

Chapter




Wireless features

 
- Using the Wireless Manager
- Using Bluetooth®
- Setting a GPRS connection


Using the Wireless Manager

The Wireless Manager allows you to enable or disable your wireless connections in a single location. This is a quick way to preserve battery power or to prepare your device for an airplane flight.

To use the Wireless Manager:

1. Tap **Start > Settings > Connections** tab.
2. Tap **Wireless Manager**.
3. From the Wireless Manager screen, do any of the following:
 - Tap the button for a desired wireless connection type to turn it on or off. If it is already turned off, the button is a lighter color and displays an icon marked with an X.
 - Tap **All**  to turn all wireless connections on or off.
 - Tap **Menu** to change settings for one of the displayed wireless connection types.

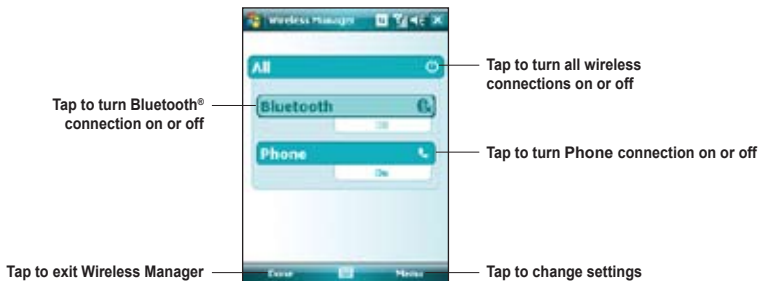

4. Tap **Done** or  to exit Wireless Manager.

Using Bluetooth®

Overview

Bluetooth® is a short-range wireless communications technology that allows devices with Bluetooth capabilities to exchange data within a radius of about 10 meters (30 feet) without requiring a physical connection. With Bluetooth enabled in your device, you can:

- Connect and communicate (i.e. beam files, tasks, contacts) with other devices with Bluetooth features.
- Use Bluetooth service. After you connect to another device or computer using Bluetooth, you can use the services available on that device.

 
Activating Bluetooth in your device

Use the Wireless Manager to enable or disable Bluetooth in your device. You can access the Wireless Manager by performing any of the following:

1. Tap **Start** > **Settings** > **Connections** tab then tap the **Wireless Manager** icon.
2. From the Wireless Manager screen, tap **Bluetooth**.

You can also launch Wireless Manager from the Today screen by tapping the Wireless Manager icon.

Tap to launch
Wireless Manager

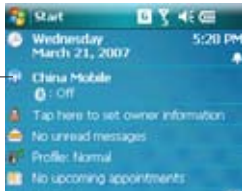

NOTES:

When not in use, deactivate Bluetooth in your device to conserve battery power.

Adding Bluetooth devices

1. Make sure that Bluetooth is enabled on the device you want to add and the device is set as Discoverable.
2. Tap **Start > Settings > Connections** then tap **Bluetooth** icon.
3. Tap **Add new device...** to search for available Bluetooth devices. The search may take a while.
4. Select the device you want to connect with then tap **Next** or press the Right Soft key.



- When prompted, input the alphanumeric passcode of the device you want to connect then tap **Next** or press the Right Soft key. You can find the passcode in the documentation that came with the connecting device.



- Input the display name for this connection.



 
7. Repeat steps 3 - 6 to connect more devices.



Setting a GPRS connection

Your P526 allows you to connect via General Packet Radio Service (GPRS). GPRS is a wireless communication standard that runs at speeds of up to 115 kbps, compared to 9.6 kbps of the current Global System for Mobile Communications (GSM). It supports a wide range of bandwidths that allows sending and receiving small bursts of data, such as email and web browsing. To set a GPRS connection in your device:

1. From the Today screen, tap **G** on the status bar.
2. Tap **Settings** on the message prompt.

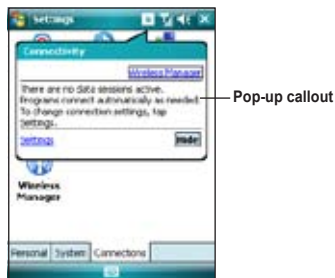

3. From the Settings screen, select the Connections tab then tap **Connections** icon.



4. From the Connections screen, tap **Add a new modem connection**.



5. Input a unique name for the connection then select **Cellular Line (GPRS)** from the modem list.



6. Input the Access point name.



7. Input your user name, password, and domain then tap **Finish**. Contact your network administrator for assistance.



NOTE:

The GPRS and USB connections can not be used at the same time.

Connecting GPRS

To connect GPRS:

1. Tap **Start > Settings > Connections** tab then tap **Connections** icon.
2. From the Connections screen, tap **Manage existing connections.**



3. Tap and hold on an existing connection then from the pop-up menu tap **Connect**.

Tap **Delete** if you want to delete selected connection setting.

4. When connected, tap **ok** to exit.

NOTE:

- When WLAN is used simultaneously with the GPRS, the latter will get signal priority. We recommend not to use WLAN and GPRS at the same time.
-



If you have set a default GPRS connection, it automatically connects when you launch an application that connects to the Internet.

1. Launch any application that connects to the Internet (e.g. Internet Explorer).

The device will automatically connect to your default GPRS connection. A pop-up callout appears to display the connection status.

2. When connected, you can start browsing the Internet. If you are using Internet Explorer, the default site will be displayed.



Pop-up callout

Disconnecting GPRS

To disconnect GPRS:

1. Tap **G** from the status bar.
2. From the pop-up callout, tap **Disconnect**.

NOTE:

- If your ActiveSync is set to sync with Exchange Server automatically, synchronization will occur after you connect again.
- GPRS will automatically reconnect everytime you launch an application that requires GPRS connection (e.g., Internet Explorer or Pocket MSN).



Using the GPRS Tool

The GPRS Tool allows you to conveniently select and connect to your GPRS service provider.

To connect via GPRS Tool:

1. Tap **Start > Settings > Connections** tab then tap the **Network Setting** icon.

You can also tap **G** on the status bar then tap **Settings** from the pop-up callout.



2. From the Network Setting screen, select your GPRS provider from the list.

NOTE:

- Operators vary in different regions.
 - The GPRS and USB connections cannot be used at the same time.
-





Chapter



Multimedia features

- Using the camera
- Viewing pictures and videos

 
 
Using the camera

The built-in two-megapixel camera allows you to take photos and record audio/video clips.

Launching the camera

To start using the camera:


- Tap **Start > Programs > Pictures and Videos > Camera** icon or
- Press and hold the Camera button on the right side of your device.

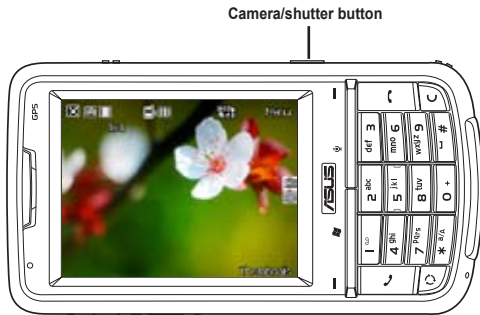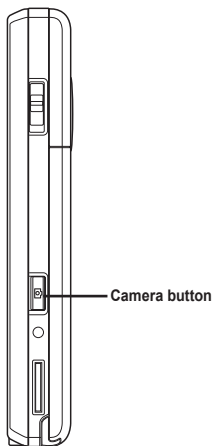

NOTE:

- By default, the preview screen is set to landscape.
- After launching the camera, your device is set to camera mode by default.
- In camera mode, the camera button function as shutter button.

To exit the Camera:

- Tap the exit  icon on the camera screen.

Available capture modes

Your device camera can be set to two capture modes:

- **Camera mode** - Camera mode allows you to take photos, and save them to your device or MicroSD. You can also configure the camera to match an environment, set picture size, select magnification, adjust the picture quality, apply effects, and modify other advanced settings.
- **Video mode** - Video mode enables you to record audio/video clips. Like in camera mode, it also allows you to select the magnification, set the video size, apply some effects, select target storage, and modify advanced video settings.

 
Supported formats

Using the camera mode or video mode, the images or video clip captured are stored in the following formats:



 




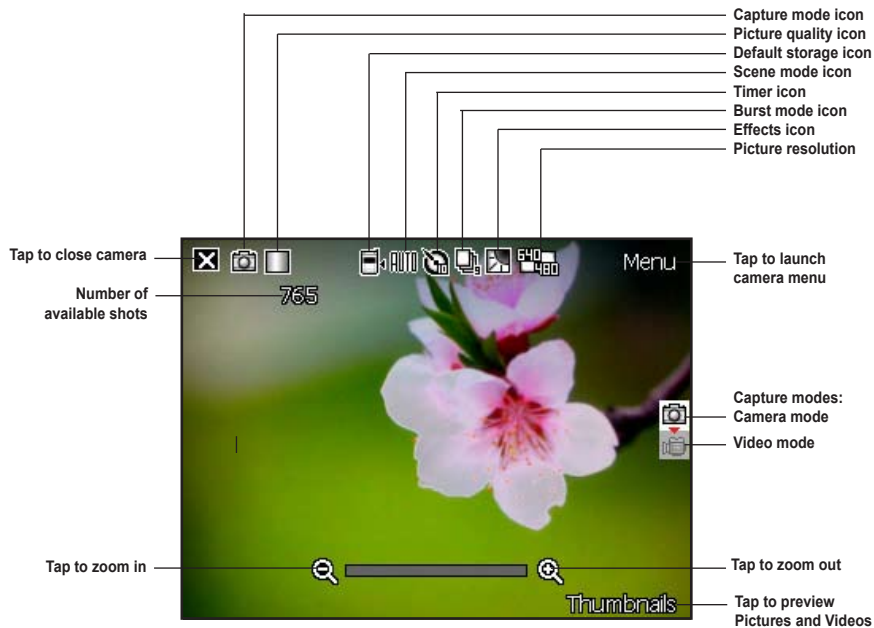

 








 












- **Still image (Camera mode)** - JPEG (.jpg)
- **Video (Video mode)** - 3GP (.3gp), MPEG-4 (.mp4)

Camera mode screen

The following describes the screen icons in Camera mode:



Camera mode icons

- **Capture mode icon** [ / ] - indicates the current capture mode.
- **Picture quality icon** [ /  / ] - indicates the picture quality used.
- **Default storage icon** [ / ] - indicates default storage for captured images and videos clips.
- **Scene mode icon** [ /  / ] - indicates the scene mode used.
- **Timer icon** [ / ] - when the camera timer is enabled (5 seconds or 10 seconds), the corresponding timer icon appears. When you press the shutter button or the navigation button to take a picture, the count down begins and picture is taken after the time set.
- **Burst mode icon** [ / ] - indicates the number of frames in burst mode.
- **Effects icon** [ /  /  / ] - indicates the effects used.
- **Picture resolution** [ /  /  /  /  /  /  / ] - shows the resolution used. When set to 1600x1200 resolution, the zoom in/zoom out function is disabled.
- **Exit icon** [] - tap to exit camera.
- **Zoom In** [] - tap to zoom in view of subject on screen.
- **Zoom Out** [] - tap to zoom out view of subject on screen.
- **Thumbnails** [] - tap to launch Pictures and Video application and preview your images in thumbnails.
- **Menu** [] - tap to launch camera menu options.
- **Remaining shots information** - shows the remaining, available shots of pictures based on the current settings.

Camera options menu

The camera options menu allows you to change various camera and picture settings.

To launch options menu:

1. Tap **Menu** from the camera screen.



2. From the shortcut menu, tap an icon to display contents.



Camera options
shortcut menu

Change Mode

The Change Mode option allows you to set capture mode into Camera or Video mode.



Scene

The Scene option allows you to select presets appropriate for a night scene or sports event. Select **Auto** to use best setting for any scene.



Picture Size

Allows you to set the frame size of picture.



Picture Quality

This option provides three picture quality presets: Normal, Fine, and Super Fine. The picture quality is set to Super Fine by default.



Zoom

Allows you to change the maximum magnification allowed.



Self-Timer

Sets the delay of shutter release to 5 or 10 seconds after you have pressed the camera/shutter button.



Burst

Allows you to take 4 or 9 pictures in succession with one press of the camera/shutter button.



Frame

Allows you to set a frame.

 
NOTE:

Ensure that you have set the screen resolution to 320 x 240 before setting frame.



Effect

The Effect option allows you to apply some effects to the subject. Select from the following configuration options: **Black-White**, **Negative**, **Solarize**, and **Sepia**. Set to **Normal** for no effect.

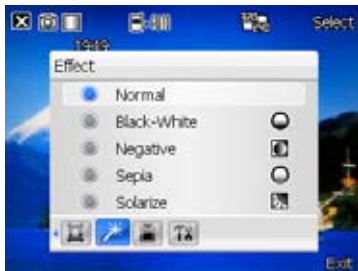

Save to

Allows you to select the default storage for captured pictures.

NOTE:

 
Prepare a MicroSD card before setting default storage to **Storage Card**.



Advanced

This option allows you to set the following:

- Filename prefix format
- Filename prefix
- File number
- Date and time stamp
- Shutter sound
- Burst interval

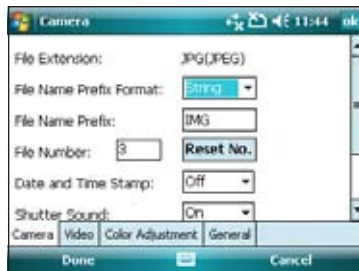


Taking photos

After launching the camera, your device is set to Camera mode by default. If set otherwise, tap **Menu > Change Mode > Camera Mode** then tap **Done**.

You can also set to camera mode by tapping the camera mode icon on the screen.

To take a photo:

1. Aim device to your subject then press camera/shutter button.
2. When the «» icon appears, make sure the device is stable and not shaking.
3. Repeat steps 1 to 2 to take more photos.



NOTE:









 






The image is automatically saved to the default storage location and can be viewed using the Pictures and Videos application.

Video mode screen

The following describes the screen icons in Video mode:



Video mode icons

 
- **Capture mode icon** [ / ] - indicates the current capture mode.
- **Default storage icon** [ / ] - indicates default storage for captured video clips.
- **Effects icon** [ /  /  / ] - indicates the effects used.
- **Video size** [ / ] - shows the video size used.
- **Exit icon** [] - tap to exit video.
- **Zoom In** [] - tap to zoom in view of subject on screen.
- **Zoom Out** [] - tap to zoom out view of subject on screen.
- **Thumbnails** [] - tap to launch Pictures and Video application and play your video.
- **Menu** [] - tap to launch video menu options.
- **Remaining video recording time information** - shows the remaining, video recording time based on the current settings.

Video options menu

The video options menu allows you to change various video and playback settings.

To launch video options menu:

1. Tap **Menu** from the video screen.

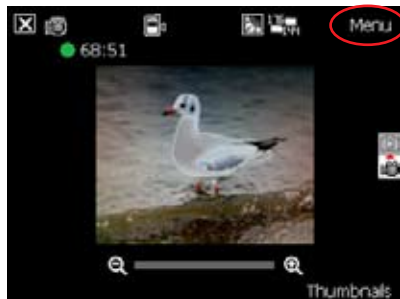

2. From the shortcut menu, tap an icon to display contents.



Video options
shortcut menu

Change Mode

The Change Mode option allows you to set your device into Camera or Video capture mode.



Zoom

Allows you to change the maximum magnification allowed.



Video Size

Allows you to set the frame size of video.



Save to

Allows you to select the default storage location for captured pictures.

NOTE:

Prepare a MicroSD card before setting default storage to **Storage Card**.



Effect

The Effect option allows you to apply some effects to the subject. Select from the following configuration options: **Black-White**, **Negative**, **Solarize**, and **Sepia**. Set to **Normal** for no effect.



Advanced

This option allows you to set the following:

- Video filetype
- Filename prefix format
- Filename prefix
- File number
- Enable or disable audio when recording



Recording videos

Set the device to video capture mode to record videos.

To set video mode:

- Tap **Menu > Change Mode > Video Mode** then tap **Done**.
- You can also set the video mode by tapping the video mode icon on the screen.



To record video:

1. Aim device to your subject then press camera/shutter button to begin recording.

The record indicator turns from green to red while video is recording.

2. Press the camera/shutter button again to stop recording.



NOTE:

- The video clip is automatically saved to the default storage location.
- Use Windows Media Player Mobile to playback video clip in your device.
- Use Apple® QuickTime™ player, if you wish to play video clips in your computer. You can download QuickTime™ installer from www.apple.com/quicktime.

Viewing pictures and videos

Use the Pictures and Video Application to preview stored images and playback video clips.

Viewing pictures and videos

To view pictures and videos:

1. Tap **Start > Programs > Pictures and Videos**.
2. Tap the picture or video clip you want to see.
 - To view pictures or launch video clips stored in MicroSD card, tap the folder list (labeled **My Pictures**), and tap **MicroSD Card**.
 - To view pictures stored in **My Pictures** folder on your device, tap **My Pictures** then tap picture thumbnail.
 - To playback video clips in **My Videos** folder on your device, tap **My Videos** then tap video thumbnail.

Chapter

6

Other features

 
- ASUS Launcher
- ASUS Call Filter
- Remote Presenter
- Windows Live™
- Setting ring tone
- Wake-up setting
- Mode switcher
- System information
- Restoring factory default settings

ASUS Launcher

ASUS Launcher is an alternative program that allows you to conveniently and quickly launch applications, perform tasks, and change device settings. By default, the ASUS Launcher menu appears after you start your device.

You can also manually run the program from **Start > Programs > ASUS Launcher**.

Using the ASUS Launcher

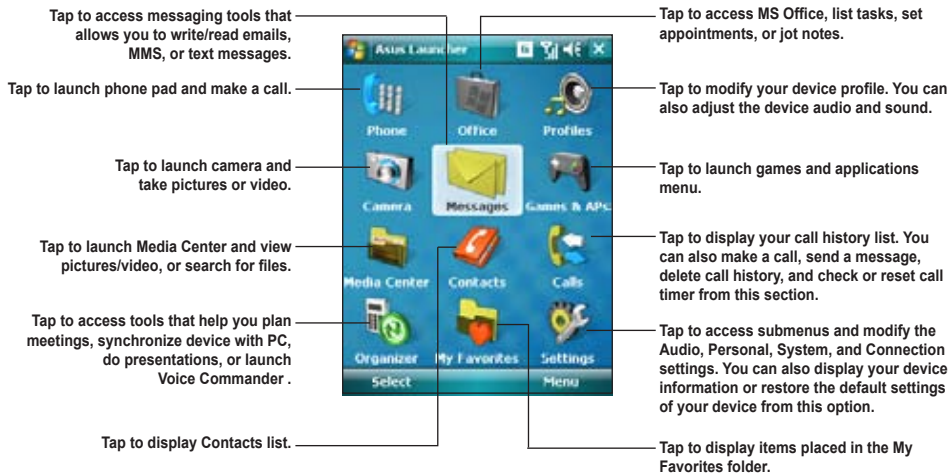

ASUS CallFilter

The ASUS CallFilter is a simple yet efficient utility that allows you to control all your incoming calls. Using this utility, you can manage a list of telephone numbers from your Contacts list, call log, message log, or any unlisted telephone number that you want to accept or reject.


Launching ASUS CallFilter

Tap  from the Today screen to launch the ASUS CallFilter.



Tap to launch CallFilter

The first time you launch ASUS CallFilter, you need to install and select the storage location for ASUS CallFilter. The following describes the steps when running ASUS CallFilter the first time.

1. After tapping  from the Today screen, the utility installs the necessary cabinet (.cab) files to your device. Follow succeeding screen instructions to complete the process.



 
IMPORTANT:

The installation may take a few seconds to complete. DO NOT turn off your device during the installation process.


2. When prompted, select storage location then tap **Install**.



3. When finished, tap **Ok** to restart your device.

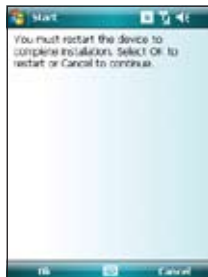


Using ASUS CallFilter

After installing the necessary files, tap  to launch the ASUS CallFilter shortcut menu. The shortcut menu allows you to conveniently activate either the Accept or Reject list.

From the shortcut menu, do any of the following:

 - Tap **Accept List** to activate Accept list and receive only incoming calls whose numbers are in the Accept list.
- Tap **Reject List** to activate Reject list and reject all incoming calls whose numbers are in the Reject list.
- Tap **Edit** to open the CallFilter utility screen.
- Tap **Close** to deactivate CallFilter.

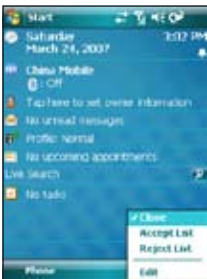

CallFilter shortcut menu

Managing the Accept list

The Accept list allows you to select telephone numbers you only want to accept. Incoming calls that are not in the Accept list will automatically be rejected.

 
 
To add items in the Accept list:

1. From the ASUS CallFilter shortcut menu, select **Edit**.
2. Select **Accept List** from Edit List box.
3. Select source of data. You can get data from your Contacts, Call log, Message log, or you can key in any anonymous number.
4. From the list (e.g. Contacts), select an item then tap **Add**.

You can also tap **->** to add a new Accept list item.

5. Click **ok** to exit.

To remove items from the Accept list, select a contact from the Accept list then tap **Remove** or **<-**.

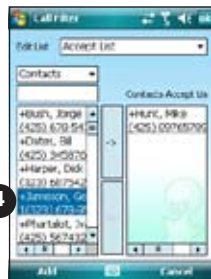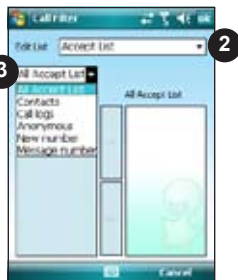


Managing the Reject list


The Reject list allows you to select telephone numbers you want to reject. Incoming calls that are in the Reject list will be rejected.



To add items in the Reject list:

 1. From the ASUS CallFilter shortcut menu, select **Edit**.
2. Select **Reject List** from Edit List box.
3. Select source of data. You can get data from your Contacts, Call log, Message log, or you can key in any anonymous number.
4. From the list (e.g. Contacts), select an item then tap **Add**.

You can also tap  to add a new Reject list item.

 5. Click  to exit.

  To remove items from the Reject list, select a contact from the Reject list then tap **Remove** or .

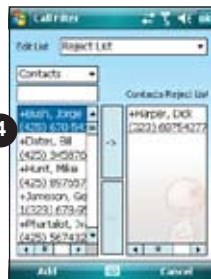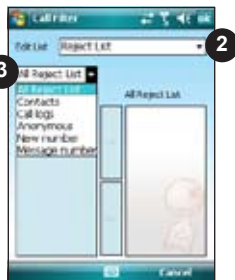

Remote Presenter

From your P526 device, Remote Presenter allows you to remotely control PowerPoint™ presentations running on your desktop or notebook. Operating over a Bluetooth wireless connection, it promotes convenience and freedom of movement during your presentation. It also enables you to review slide notes without affecting the audience's view of the slide show.

Using the Remote Presenter

IMPORTANT:

- Before you start, make sure to install the Remote Presenter utility on your computer. You can find the installation files in the bundled support CD.
- Remote Presenter works with Bluetooth-enabled computers only.

To use the Remote Presenter:

1. Tap **Start > Programs > Remote Presenter**.

You can also execute Remote Presenter from the ASUS Launcher menu. From the ASUS Launcher menu, tap **Organizer** then tap **Remote Control Presenter**.

2. Do the following before searching for Bluetooth devices:
 - Activate Bluetooth in your computer.
 - Launch the Remote Presenter program in your computer.

To do this, from your computer desktop, click **Start > All Programs > ASUS > Remote Presenter**.

When done, tap **Next** on your device.



The following describes the Remote Presenter menu on your computer screen.



 
3. From the list of Bluetooth devices found, select the name of computer containing your PowerPoint presentation then tap **Next**.



4. Check your computer screen when your P526 prompts the following message:



5. The following message appears on your computer screen. Click the message prompt to allow your P526 to access the ActiveSync service of your computer.

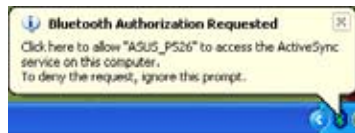

6. Tap **Yes** to allow your computer to connect to your device.



8. When prompted, input the same authentication passkey on your P526.



7. From your computer, key in an authentication passkey then click **OK**. The authentication passkey is used to secure your connection.




NOTE: The Bluetooth authentication passkey is only required if a paired relationship is not yet established between devices.

9. Tap the check boxes to select services for your device then click **Finish**.



10. Tap **Connect** to connect to your computer.



11. From the Remote Controller menu on your computer, click  to establish a connection.

When prompted with the Bluetooth Service Authorization message, click **OK**.



12. The following screen appears on your device when a successful connection was established.

 
Repeat from step 1 if the connection failed.





13. Tap the name of PowerPoint (.ppt) file to show then tap **Select**.



Upon selection, Microsoft® PowerPoint is automatically launched on your computer with the selected file open.

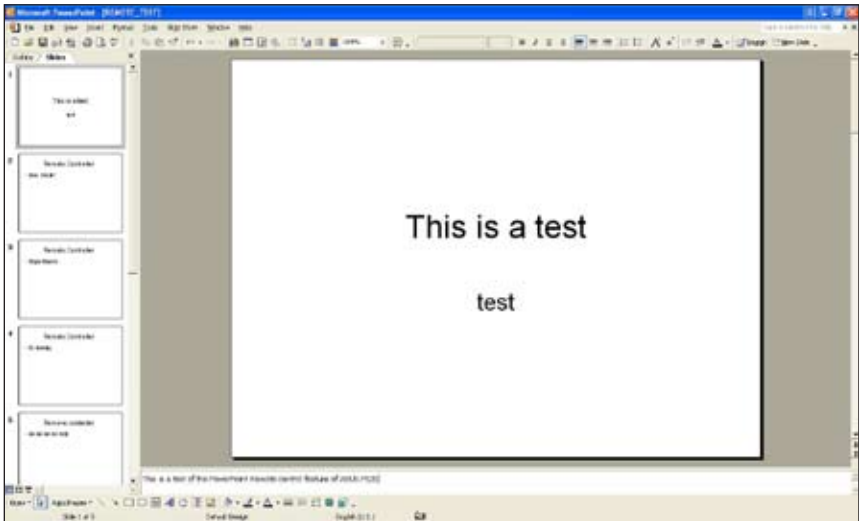

  14. You can now remotely control the PowerPoint presentation on your computer using your device. The following describes the control menu on your device.

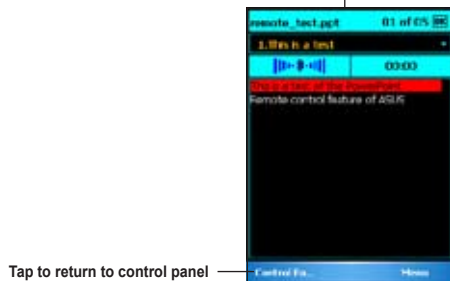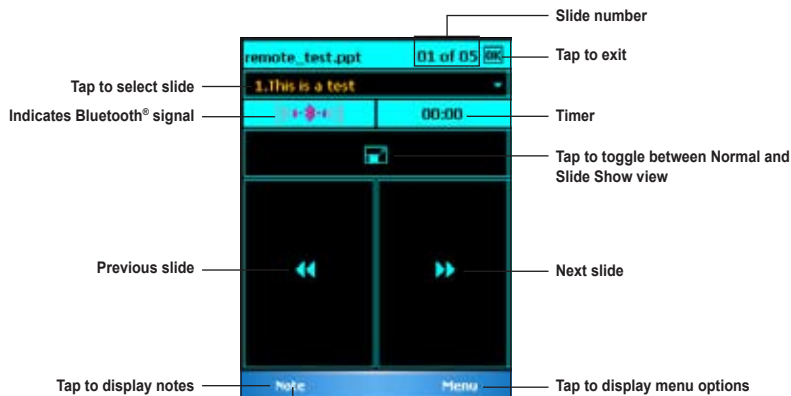

Notes panel

Windows Live™

Windows Live™ provides a set of services including email, messaging, and search that brings all your online necessities together. With Windows Live, you can conveniently do the following on your device:

- Access your Hotmail, MSN, or Microsoft Exchange account and send or receive emails.
- See who among your friends are online and start a chat.
- Search the web using the simple and precise Windows Live search engine.

Signing up

Before you can start using Windows Live on your device, you must have a Windows Live ID, Microsoft Passport, or Microsoft Exchange email account. If you previously have a Hotmail or MSN Messenger account, that is already your Passport account. You can use these to sign in to Windows Live.

If you don't have an account, go to the following websites and setup a free account:

www.live.com

www.passport.com

www.hotmail.com

IMPORTANT:

Ensure that your cellular line or SIM comes with a mobile data service such as a General Packet Radio Service (GPRS) to allow you to connect to the Internet. Contact your cellular phone company for details.

To sign in Windows Live:

1. Tap **Start > Programs > Windows Live**

You can also launch Windows Live from the ASUS Launcher menu. To do this, tap **Games and APs** then tap **Windows Live**.

2. Tap **Sign in to Windows Live**. If you are not connected to the internet, your device automatically connects you to the Internet via GPRS.

IMPORTANT:

Ensure that you have configured the GPRS connection on your device.



3. Read the Windows Live Terms of Use then tap **Accept**. If you do not agree, tap **Reject**.

The system returns to the Today screen if you tapped Reject.



4. Input your email address and password then tap **Next**.



5. Tap the check boxes to show or hide Windows Live items on the Today screen.
Tap **Next** when done.



6. Select the items that you want to synchronize on your device, then tap **Next**.



The synchronization status is displayed as shown on the following screen while Windows Live is synchronizing the items on your device. This will take a moment.



 
After synchronization, the following screen appears. Tap the arrow heads to display items for Mail, Messenger, or Sync services.

Tap **Menu** to access Windows Live and account options.



If you enabled Windows Live to be displayed on the Today screen, your Windows Live username and account status are displayed as shown.

Tap the arrow heads to access the Windows Live, Mail, Messenger or Sync menus.

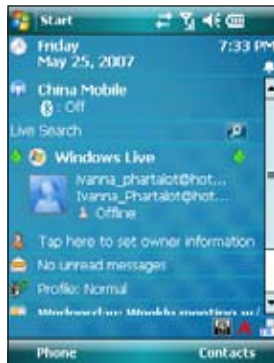

Meeting Time Planner

Meeting Time Planner allows you to find a suitable time to have a video conference, telephone or net meeting with participants in different time zones.

Using the Meeting Time Planner

 
To use the Meeting Time Planner:

1. Tap **Start > Programs > Meeting Time Planner**.

2. Select the date and the cities.

A color-coded 24-hour time table of the chosen cities appear, allowing you to identify the best time for the meeting. Dark blue is late night/early morning, light blue is off-peak hour, and white is peak daytime hour. You can also change the interval of time shown by tapping **Interval** on the lower-right corner of the screen.

3. Select the time for your meeting and tap **New Date**.
4. Fill in the meeting information and tap **OK** to add your date into the Calendar.

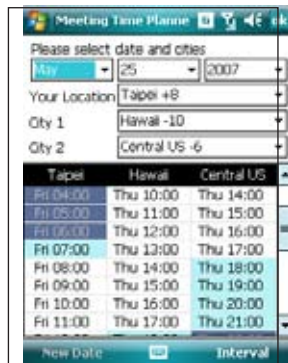

NOTE:

You can tap **Interval > Summer Time** use daylight saving time.


Setting ring tone

With P526 you can add and configure your favorite music as your phone ring tone. You can easily configure your favorite song or sound as your ring tone with the following compatible audio formats: aac/acc+, amr, .mp3, .wav, .wma, and .mid.

Adding ring tone to selection

To add ring tone to the selection category under phone setting:




1. Tap **Start > Settings > Personal > Ringtone** icon.
2. Select a specific file extension from the list box.
3. Tap to check a ring tone file that you want to add.

Tap  to try ring tone sound and tap  to stop.



Changing the ring tone

To change the ring tone:

1. Tap **Start** > **Settings** > **Personal** > **Phone** icon.
2. Select a ring tone from the **Ring tone** list box. The songs or sounds that you added as ring tone appears on this list along with the default ring tones that came with the device.
Tap  to play ring tone sound and tap  to stop.
3. Tap  when finished.



Wake-up setting

You can set the wake-up actions whenever your device is in sleep mode.

To set the wake-up action:

1. Tap **Start > Settings > Personal > Wakeup source** icon.
2. Select from the available wake-up actions.

Tap **Select All** to select all actions or tap **Select None** to deselect all available actions.

3. Tap **ok** when finished.

 


Mode switcher

Mode switcher allows you to easily switch between applications and tasks.

To use the mode switcher, press the mode switcher button on your device keypad. Press again to shift between applications.

You can also use the mode switcher button to turn the flash light on or off. Press and hold the mode switcher button to use this feature.

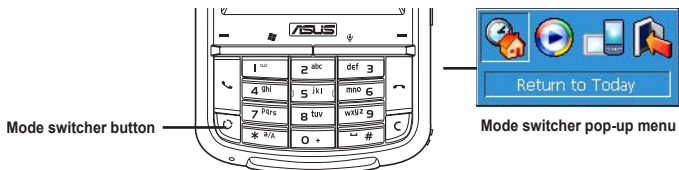

You can configure the mode switcher and define the switcher type or select items to appear in the mode switcher pop-up menu.

To define the switcher type:

1. Tap **Start > Settings > System > Mode Switcher** icon.
2. Tap the radio buttons to select the Switcher type.
3. Tap and drag the handle bar to set the switch Waiting Time.

To select items to appear in the switcher pop-up menu:

1. Tap **Start > Settings > System > Mode Switcher** icon.
2. Tap the Items tab.
3. Select the items by tapping the check boxes.

System information

The System Information contains important device information including the current device settings and version.

To launch the System Information:

1. Tap **Start > Settings > System > System Information** icon.
2. Tap the **Device Info** tab for device hardware information.
3. Tap **Version** tab to display the ROM, Boot, Radio, MP and Battery version.

Device Info



The screenshot shows the 'Device Info' tab selected. The table lists various device specifications:

Item	Description
Device name :	ASUS P526
UUID :	7ABF5000-2266-0001-130B-0077D5580374
IMEI :	353472010004996
Flash size :	120 MB
RAM size :	64 MB
Screen resolution :	240 x 320
Color :	65536
BT MAC address :	0012d1dc239c

At the bottom, the 'Device Info' tab is highlighted, and the 'Version' tab is visible next to it.

Version



The screenshot shows the 'Version' tab selected. The table lists software versions:

Item	Description
ROM date :	2007/2/16
ROM version :	A4.77
Boot version :	A4.77
Radio version :	W8.6.31
Battery version :	01.3
Extended ROM v...	Unknown

At the bottom, the 'Version' tab is highlighted, and the 'Device Info' tab is visible next to it.

Restoring default factory settings

This option allows you to restore the default factory settings.

To restore default settings:

1. Tap **Start > Settings > Default Settings**.
2. Input '1234' in the Password field to confirm that you want to restore to default settings.
3. Tap **Ok**.

You can also restore the factory settings by pressing the jog dial upward and the reset button at the same time.



WARNING:

This option will delete all files stored in this device.

Chapter




Device components status

- ASUS Status icon

ASUS status icon

The ASUS status icon allows you to easily check and see the current status of the following device components: USB, LCD Brightness, Battery power, Memory, MicroSD card, and storage.

To check the status of these components, tap the ASUS Status icon  on the Today screen.



USB: Allows you to set the USB connection mode.

Brightness: Tap to adjust the LCD brightness on battery power or external power.

Power: Displays the remaining battery power and allows you to set advanced power saving features.

Memory: Displays the total, currently used, and remaining memory available.

 
Storage card memory: Displays the total, used, and remaining storage card memory.

MicroSD card: Tap to display the contents of the MicroSD card installed.

Settings: Allows you to select the items to display in this ASUS Status pop-up menu.


USB setting

Allows you to set the USB connection mode.

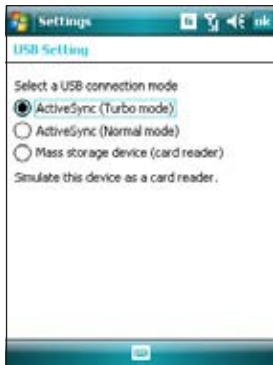


LCD Brightness

 Adjusts the LCD brightness on battery power and external power.

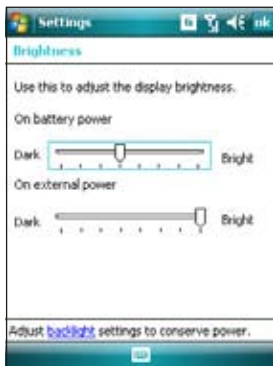

Battery

 Displays the battery power status.

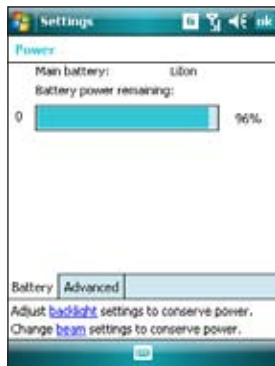

The Advanced settings allows you to set a time when to turn-off the device if not used.



Memory

Displays the total, in use and free memory.



Storage card memory

Displays the total, in use, and available storage card memory.



Programs running in memory

Allows you to activate or stop any program running on memory.

IMPORTANT:

When you exit a running program, you are actually only minimizing it and the program remains in the memory. You can stop these programs from running in the background using this option.



Settings

Allows you to select the items to display in the ASUS Settings pop-up menu.



Appendix

- Notices
- Contact information

Notices

Replaceable batteries

If an equipment is provided with a replaceable battery and if replacement by an incorrect type could result in an explosion (e.g. with some lithium batteries), the following applies:

- if the battery is placed in an OPERATOR ACCESS AREA, there shall be a marking close to the battery or a statement in both the operating and the servicing instructions;
- if the battery is placed elsewhere in the equipment, there shall be a marking close to the battery or a statement in the servicing instructions.

The marking or statement shall include the following or similar text:

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
THE INSTRUCTIONS

Operator access with a tool

If a TOOL is necessary to gain access to an OPERATOR ACCESS AREA, either all other compartments within that area containing a hazard shall be inaccessible to the OPERATOR by the use of the same TOOL, or such compartments shall be marked to discourage OPERATOR access.

An acceptable marking for an electric shock hazard is (ISO 3864, No. 5036).

Equipment for restricted access locations

For equipment intended only for installation in a RESTRICTED ACCESS LOCATION, the installation instructions shall contain a statement to this effect.

WARNING

The user needs to switch off the device when exposed to areas with potentially explosive atmospheres such as petrol stations, chemical storage depots and blasting operations.

ASUS

Address: 15 Li-Te Road, Peitou, Taipei, Taiwan

Tel: 886-2-2894-3447; Fax: 886-2-2890-7698

Declaration

We declare that the IMEI codes for this product, **P526**, are unique to each unit and only assigned to this model. The IMEI of each unit is factory set and cannot be altered by the user and that it complies with the relevant IMEI integrity related requirements expressed in the GSM standards.

Should you have any questions or comments regarding this matter, please have our best attention.

Sincerely yours,

ASUSTeK COMPUTER INC.

Tel: 886-2-2894-3447

Fax: 886-2-2890-7698

E-mail: <http://vip.asus.com/eservice/techserv.aspx>

Contact information

ASUSTeK COMPUTER INC. (Taiwan)

Hotline: 0800-093-456 (Toll-Free call from Taiwan only)
Fax: 886-2-2895-9254
Online service: <http://vip.asus.com/eservice/techserv.aspx>
WWW: <http://tw.asus.com>

ASUSTeK COMPUTER INC. (Asia-Pacific)

Hotline: 886-2-2894-3447
Fax: 886-2-2890-7698
Online service: <http://vip.asus.com/eservice/techserv.aspx>
WWW: <http://www.asus.com>

ASUS COMPUTER GmbH (Germany/Austria)

Hotline: +49-2102-9599-10
Fax: +49-2102-9599-11
Online service: <http://vip.asus.com/eservice/techserv.aspx>
WWW: <http://www.asus.de>

ASUS COMPUTER (China)

Tel: +86-10-82667575
Online service: <http://vip.asus.com.cn/eservice/techserv.aspx>