

Motherboard

H87-PLUS

Quick Start Guide

دليل التشغيل السريع

Кратко упътване за бърз старт

Stručná příručka

Quick Start-vejledning

Snelstartgids

Lühijuhend

راهنمای شروع سریع

Guide de démarrage rapide

Pikakäynnistysopas

Schnellstarthilfe

Οδηγός γρήγορης έναρξης

Beüzemelési útmutató

Guida Rapida

Panduan Ringkas

クイックスタートガイド

Жылдам іске қосу нұсқаулығы

빠른 시작 설명서

Greitos darbo pradžios vadovas

Īsa pamācība

Hurtigstartsveiledning

Guia de consulta rápida

Instrukcja szybkiej instalacji

Краткое руководство

Ghid de pornire rapidă

Guía de inicio rápida

Vodič za brzo korišćenje

Stručný návod na spustenie

Snabbstartsguide

คู่มือเริ่มต้นอย่างเร็ว

Hızlı Başlatma Kılavuzu

Hồðùng dẫñ khòuì ñỏang nhanh




Australia statement notice

From 1 January 2012 updated warranties apply to all ASUS products, consistent with the Australian Consumer Law. For the latest product warranty details please visit <http://support.asus.com>. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.







If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <http://support.asus.com>

Motherboard Layout

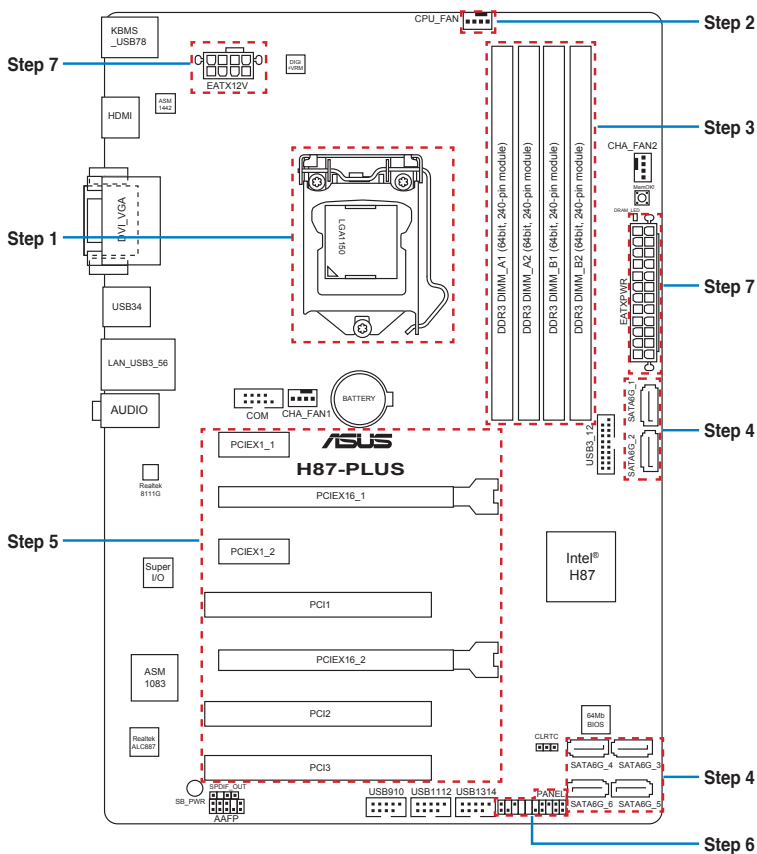


Step 1

E	Install the CPU	KZ	CPU орнатыңыз
ARB	قم بتثبيت وحدة المعالجة المركزية (CPU)	K	CPU 설치
BG	Инсталирайте процесора	LT	Sumontuokite centrinį procesorių
CZ	Instalace procesoru	LV	Uzstādiet centrālo procesoru
DA	Installer CPU'en	NW	Installer sentralprosessoren (CPU)
DU	De CPU installeren	PG	Instale a CPU
EE	Paigaldage CPU	PL	Instalacja procesora
FA	CPU را نصب کنید	R	Установка процессора
F	Installer le CPU	RO	Instalați CPU-ul
FI	Asenna suoritin	S	Instalar la CPU
G	Installieren der CPU	SB	Instalirajte CPU
GK	Εγκατάσταση της CPU	SK	Inštalácia centrálného procesora
HUG	Helyezze be a CPU-t	SW	Installera CPU
I	Installare la CPU	TH	ติดตั้ง CPU
ID	Pasang CPU	TR	CPU'yu takın
J	CPUを設置する	VI	Lắp CPU

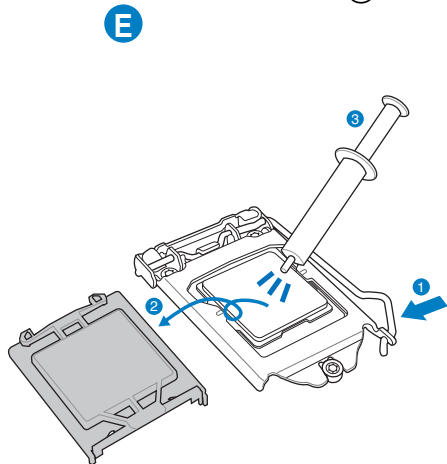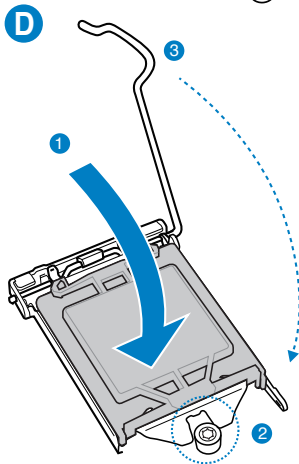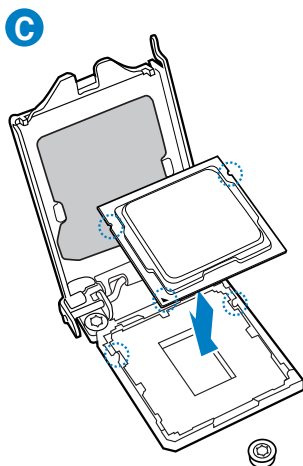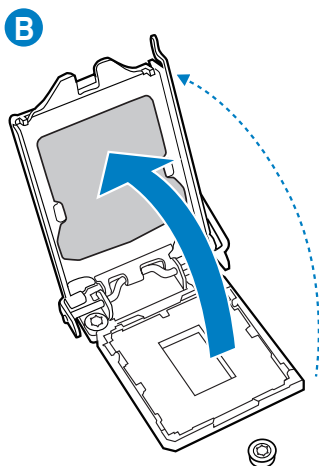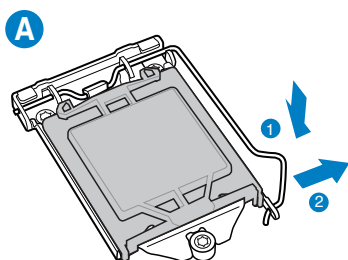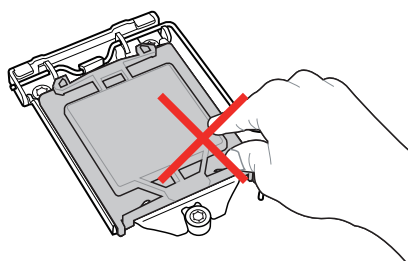


Step 2

- | | |
|---|---|
| E Install the CPU fan | KZ CPU желдеткішін орнатыңыз |
| ARB تثبيت مروحة وحدة المعالجة المركزية | K CPU 팬 설치 |
| BG Инсталирайте вентилатора на процесора | LT Sumontuokite centrinio procesoriaus ventiliatorių |
| CZ Instalace ventilátoru procesoru | LV Uzstādiet centrālā procesora ventilatoru |
| DA Installer CPU-blæseren | NW Installer CPU-viften |
| DU De CPU-ventilator installeren | PG Instale a ventoinha de CPU |
| EE Paigaldage CPU ventilaator | PL Instalacja wentylatora procesora |
| FA پنکه CPU را نصب کنید | R Установка вентилятора |
| F Installer le ventilateur de CPU | RO Instalați ventilatorul CPU-ului |
| FI Asenna suorittimen tuuletin | S Instalar el ventilador de la CPU |
| G Installieren des CPU-Lüfters | SB Instalirajte CPU ventilator |
| GK Εγκατάσταση του ανεμιστήρα της CPU | SK Inštalácia ventilátora centrálneho procesora |
| HUG Szerelje be a CPU ventilátort | SW Installera CPU-fläkten |
| I Installare la ventola della CPU | TH ติดตั้งพัดลม CPU |
| ID Pasang kipas CPU | TR CPU fanını takın |
| J CPUファンを設置する | VI Lắp quạt CPU |

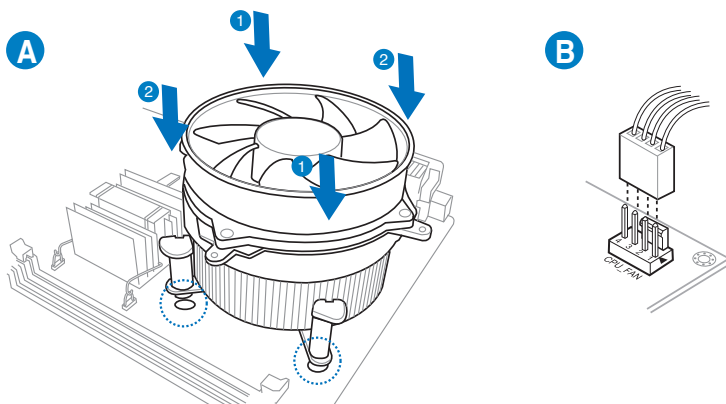


Step 3

- | | |
|--|---|
| E Install memory modules | KZ Жад модульдерін орнатыңыз |
| ARB تثبيت وحدات الذاكرة | K 메모리 모듈 설치 |
| BG Инсталирайте модулите памет | LT Sumontuokite atminties modulius |
| CZ Instalace paměťových modulů | LV Uzstādiet atmiņas moduļus |
| DA Installer hukommelsesmodulerne | NW Installer minnemoduler |
| DU Geheugenmodules installeren | PG Instale módulos de memória |
| EE Paigaldage mälu moodulid | PL Instalacja modułów pamięci |
| FA مادل های حافظه را نصب کنید | R Установка модулей памяти |
| F Installer les modules mémoire | RO Instalați modulele de memorie |
| FI Asenna muistimoduulit | S Instalar los módulos de memoria |
| G Installieren der Speichermodule | SB Instalirajte module memorije |
| GK Εγκατάσταση των στοιχείων μνήμης | SK Inštalácia pamäťových modulov |
| HUG Helyezze be a memória modulokat | SW Installera minnesmoduler |
| I Installare i moduli di memoria | TH ติดตั้งโมดูลหน่วยความจำ |
| ID Pasang modul memori | TR Bellek modüllerini takın |
| J メモリーモジュールを設置する | VI Lắp các thanh nhớ |

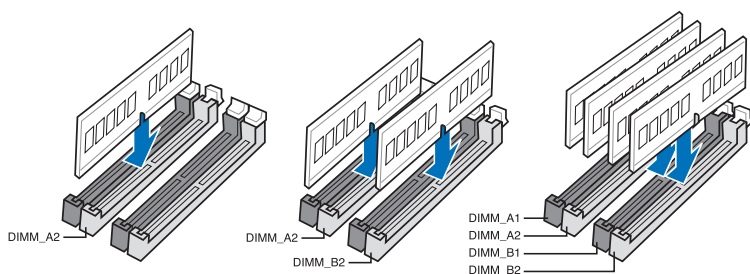


Step 4

E Install SATA devices	KZ SATA құрылғыларын орнатыңыз
ARB تثبيت أجهزة SATA	K SATA 장치 설치
BG Инсталирайте SATA устройства	LT Sumontuokite SATA įrenginius
CZ Instalace zařízení SATA	LV Uzstādiet SATA ierīces
DA Installer SATA-udstyret	NW Installer SATA-enheter
DU SATA-apparaten installeren	PG Instale dispositivos SATA
EE Paigaldage SATA seadmed	PL Instalacja urządzeń SATA
FA دستگاه های SATA را نصب کنید	R Установка SATA устройств
F Installer des périphériques SATA	RO Instalați dispozitivele SATA
FI Asenna SATA-laitteet	S Instalar dispositivos SATA
G Installieren der SATA-Geräte	SB Instalirajte SATA uređaje
GK Εγκατάσταση συσκευών SATA	SK Inštalácia zariadení SATA
HUG Szerelje be a SATA eszközöket	SW Installera SATA-enheter
I Installare i dispositivi SATA	TH ติดตั้งอุปกรณ์ SATA
ID Pasang perangkat SATA	TR SATA aygıtlarını takın
J SATA デバイスを取り付ける	VI Lắp các thiết bị SATA

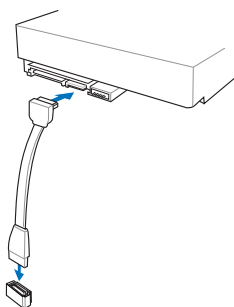


Step 5

- | | |
|--|--|
| E Install expansion card(s) | KZ Кеңейту картас(лар)ын орнатыңыз |
| ARB تثبيت بطاقة (بطاقات) التوسعة | K 확장 카드 설치 |
| BG Инсталирайте допълнителна карта (допълнителни карти) | LT Sumontuokite išplėtimo plokštę (-es) |
| CZ Instalace přídatné karty (karet) | LV Uzstādiet izvērses karti(-es) |
| DA Installer udvidelseskortene | NW Installer utvidelseskort |
| DU Uitbreidskaart(en) installeren | PG Instale placas de expansão |
| EE Paigaldage laienduskaart(-kaardid). | PL Instalacja kart(y) rozszerzenia |
| FA کارت های گسترش را نصب کنید | R Установка карт расширения |
| F Installer une carte d'extension | RO Instalați cardul/cardurile de extensie |
| FI Asenna laajennuskortti/kortit | S Instalar tarjetas de expansión |
| G Installieren der Erweiterungskarte(n) | SB Instalirajte ekspanzionu/e karticu/e |
| GK Εγκατάσταση καρτών επέκτασης | SK Inštalácia rozširujúcich kariet |
| HUG Helyezze be a bővítőkérdőírt(ka)t | SW Installera expansionskort |
| I Installare le schede di espansione | TH ติดตั้งเอ็กซ์เพนชันการ์ด |
| ID Pasang kartu ekspansi | TR Genişletme kartlarını takın |
| J 拡張カードを設置する | VI Lắp (các) thẻ mở rộng |

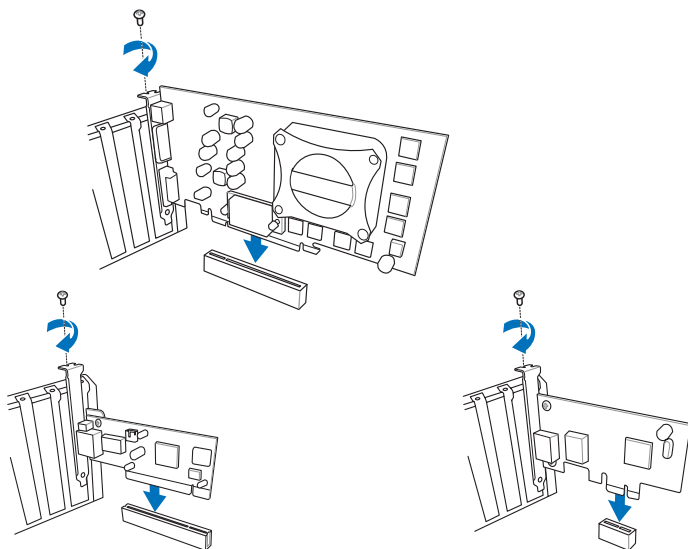



Step 6

- | | |
|---|--|
| E Install system panel connectors | KZ Жүйе тақтасының қосқыштарын орнатыңыз |
| ARB تثبيت وحدات توصيل لوحة النظام | K 시스템 패널 커넥터 설치 |
| BG Инсталирайте конекторите на системния панел | LT Sumontuokite sistemos plokštės jungtis |
| CZ Instalace konektorů panelu systému | LV Uzstādiet sistēmas paneļa savienotājus |
| DA Installer systempanelets tilslutninger | NW Installer kontakter for systempanelet |
| DU Aansluitingen op het systeempaneel installeren | PG Instale os conectores do painel do sistema |
| EE Paigaldage süsteemi paneeli konnektorid | PL Instalacja złączy panela systemu |
| FA رابط های صفحه سیستم را نصب کنید | R Установка соединений системной панели |
| F Installer les connecteurs système | RO Instalați conectorii pentru placa de bază |
| FI Asenna järjestelmäpaneelin liittimet | S Instalar conectores del panel del sistema |
| G Installieren des Systemtafelanschlusses | SB Instalirajte sistemske priključke |
| GK Εγκατάσταση συνδέσμων πάνελ συστήματος | SK Inštalácia konektorov ovládacieho panela |
| HUG Szerelje be a rendszerpanel csatlakozóit | SW Installera systempanelkontakter |
| I Installare i connettori del pannello del sistema | TH ติดตั้งหัวต่อแผงระบบ |
| ID Pasang konektor panel sistem | TR Sistem paneli konnektörlerini takın |
| J システムパネルコネクタを取り付ける | VI Lắp các đầu nối hệ thống ra ngoài |

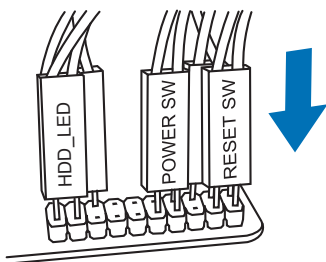


Step 7

- | | |
|---|--|
| E Install ATX power connectors | KZ ATX электр қуат қосқыштарын орнатыңыз |
| ARB تثبيت توصيلات الطاقة ATX | K ATX 전원 커넥터 설치 |
| BG Инсталирайте ATX конекторите за хранване | LT Sumontuokite ATX maitinimo jungtis |
| CZ Instalace konektorů napájení ATX | LV Uzstādiet ATX strāvas savienotājus |
| DA Installer ATX-strømtilslutningerne | NW Installer kontakter for ATX-strøm |
| DU ATX-voedingsaansluitingen installeren | PG Instale os conectores de alimentação ATX |
| EE Paigaldage ATX-i toitekonnektoriid | PL Instalacja złącz zasilacza ATX |
| FA رابط های برق ATX را نصب کنید | R Установка ATX разъема |
| F Installer les connecteurs d'alimentation ATX | RO Instalați pinii conectori ATX |
| FI Asenna ATX-virtaliittimet | S Instalar conectores de alimentación ATX |
| G Installieren des ATX-Stromanschlusses | SB Instalirajte ATX električne priključke |
| GK Εγκατάσταση συνδέσμων τροφοδοσίας ATX | SK Inštalácia napájacích konektorov ATX |
| HUG Csatlakoztassa az ATX tápcsatlakozókat | SW Installera ATX strömkontakter |
| I Installare i connettori di alimentazione ATX | TH ติดตั้งหัวต่อ ATX เพาเวอร์ |
| ID Pasang konektor daya ATX | TR ATX güç konnektörlerini takın |
| J ATX 電源コネクタを取り付ける | VI Lắp các đầu nối nguồn ATX |

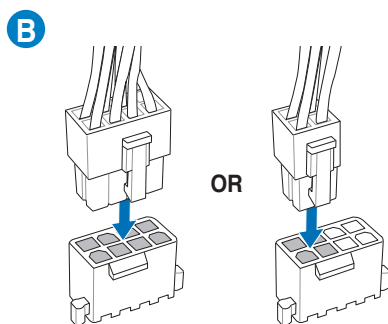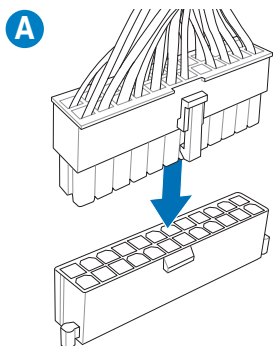

Step 8

- | | |
|---|--|
| E Connect input/output devices | KZ Кіріс/шығыс құрылғыларын қосу |
| ARB توصيل أجهزة الدخل/الخروج | K 입력/출력 장치 연결 |
| BG Свързване на I/O устройства | LT Prijunkite įvesties / išvesties įrenginius |
| CZ Připojení vstupních/výstupních zařízení | LV Pievienot ievades/izvades ierīces |
| DA Tilslut input-/outputudstyr | NW Koble til inngang/utgangsenheter. |
| DU I/O-apparaten aansluiten | PG Ligar dispositivos de entrada/saída |
| EE Ühendage sisend-/väljundseadmed | PL Podłączenie urządzeń wejścia/wyjścia |
| FA دستگاه های ورودی/خروجی را متصل نمایید | R Подключите устройства ввода/вывода |
| F Connecter les périphériques d'entrée/sortie | RO Conectare dispozitive de intrare/ieşire |
| FI Liitä tulo/lähtölaitteita | S Conectar dispositivos de entrada y salida |
| G Eingabe-/Ausgabe-Geräte verbinden | SB Povežite ulazne/izlazne uređaje |
| GK Σύνδεση συσκευών εισόδου/εξόδου | SK Pripojenie vstupných/výstupných zariadení |
| HUG Bemeneti/kimeneti eszközök csatlakoztatása | SW Anslut ingående/utgående enheter |
| I Collegare i dispositivi di input/output | TH เชื่อมต่ออุปกรณ์อินพุต/เอาต์พุต |
| ID Sambungkan perangkat input/output | TR Giriş/çıkış aygıtlarına bağlan |
| J 入力デバイスに接続する | VI Kết nối các thiết bị đầu vào/đầu ra |

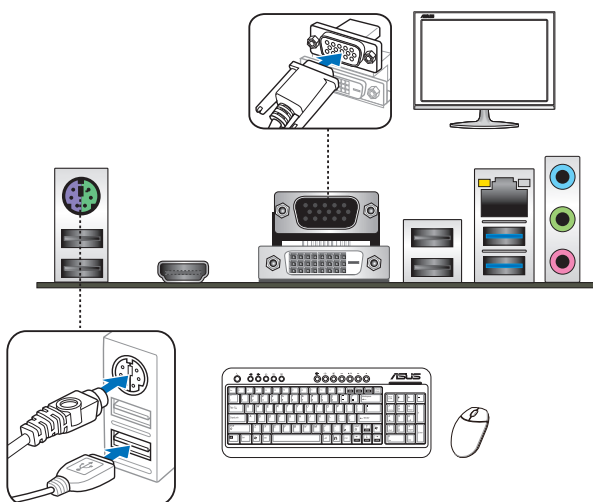

Step 9

E Power on the system and install operating system and drivers

ARB تشغيل الجهاز وتثبيت نظام وبرمجيات التشغيل

BG Включете системата и инсталирайте операционната система и драйверите

CZ Zapnutí napájení systému a instalace operačního systému a ovladačů

DA Tænd for systemet, og installer operativsystemet og de tilhørende drivere

DU Het systeem inschakelen en het besturingssysteem en de stuurprogramma's installeren

EE Lülitage süsteemi toide sisse ning installige operatsioonisüsteem ja draiverid

FA سیستم عامل را نصب کنید
سیستم را روشن کرده و درایورها

F Allumer le système et installer le système d'exploitation et les pilotes

FI Käynnistä järjestelmä ja asenna käyttöjärjestelmä ja ohjaimet

G Einschalten des Systems und installieren des Betriebssystems und der Treiber

GK Ενεργοποιήστε το σύστημα και εγκαταστήστε το λειτουργικό σύστημα και τα προγράμματα οδήγησης

HUG Kapcsolja be a rendszert és telepítse az operációs rendszert és illesztőprogramokat

I Accendere il sistema e installare il sistema operativo e i driver

ID Hidupkan sistem, lalu instal sistem operasi dan driver

J システムの電源をONにし、OSとドライバーをインストールする

KZ Жүйені қосып, операциялық жүйені және драйверлерді орнатыңыз

K 시스템 전원 켜기 및 운영체제와 드라이버 설치

LT Įjunkite sistemą ir įdiekite operacinę sistemą ir tvarkykles

LV Ieslēdziet sistēmu un instalējiet operētājsistēmu un draiverus

NW Slå på systemet og installer operativsystem og drivere

PG Ligue o sistema e instale o sistema operativo e os controladores

PL Włącz zasilanie i zainstaluj system operacyjny oraz sterowniki

R Включение системы и установка операционной системы и драйверов

RO Porniți sistemul și instalați sistemul de operare și driverele

S Proporcionar alimentación al sistema e instalar el sistema operativo y los controladores

SB Uključite sistem i instalirajte operativni sistem i drajvere

SK Zapnutie systému a inštalácia operačného systému a ovladačov

SW Slå på systemet och installera operativsystem och drivrutiner

TH เปิดระบบ และติดตั้งระบบปฏิบัติการและไดรเวอร์

TR Sistem i açip işletim sistemini ve sürücüler i yükleyin

VI Bật nguồn hệ thống và cài đặt hệ điều hành cũng như các driver

