



Intel[®] Atom[™] Processor Z3700 Series Drivers

Driver Installation Steps

August 2013

Production Version

Intel Confidential



INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

A "Mission Critical Application" is any application in which failure of the Intel Product could result, directly or indirectly, in personal injury or death. SHOULD YOU PURCHASE OR USE INTEL'S PRODUCTS FOR ANY SUCH MISSION CRITICAL APPLICATION, YOU SHALL INDEMNIFY AND HOLD INTEL AND ITS SUBSIDIARIES, SUBCONTRACTORS AND AFFILIATES, AND THE DIRECTORS, OFFICERS, AND EMPLOYEES OF EACH, HARMLESS AGAINST ALL CLAIMS COSTS, DAMAGES, AND EXPENSES AND REASONABLE ATTORNEYS' FEES ARISING OUT OF, DIRECTLY OR INDIRECTLY, ANY CLAIM OF PRODUCT LIABILITY, PERSONAL INJURY, OR DEATH ARISING IN ANY WAY OUT OF SUCH MISSION CRITICAL APPLICATION, WHETHER OR NOT INTEL OR ITS SUBCONTRACTOR WAS NEGLIGENT IN THE DESIGN, MANUFACTURE, OR WARNING OF THE INTEL PRODUCT OR ANY OF ITS PARTS.

Intel may make changes to specifications and product descriptions at any time, without notice. Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined". Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them. The information here is subject to change without notice. Do not finalize a design with this information.

The products described in this document may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Contact your local Intel sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Intel literature, may be obtained by calling 1-800-548-4725, or go to: <http://www.intel.com/design/literature.htm%20>

This document contains information on products in the design phase of development.

No computer system can provide absolute security. Requires an enabled Intel® processor, enabled chipset, firmware, software and may require a subscription with a capable service provider (may not be available in all countries). Intel assumes no liability for lost or stolen data and/or systems or any other damages resulting thereof. Consult your Service Provider for availability and functionality. For more information, visit <http://www.intel.com/go/anti-theft>. Consult your system manufacturer and/or software vendor for more information.

Bay Trail and other code names featured are used internally within Intel to identify products that are in development and not yet publicly announced for release. Customers, licensees and other third parties are not authorized by Intel to use code names in advertising, promotion or marketing of any product or services and any such use of Intel's internal code names is at the sole risk of the user.

Intel, Atom, and the Intel logo are trademarks of Intel Corporation in the U.S. and other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 2012-2013, Intel Corporation. All rights reserved.



Contents

1	Introduction	4
2	Driver Installation Steps	5
2.1	Installation Preparation	5
2.2	Driver Installation – Master Installer	5
2.2.1	Install Platform Driver.....	5
2.2.2	Install Security Services (Optional)	5
2.3	Driver Installation – Script Files.....	6
2.3.1	Install IO Driver	6
2.3.2	Install MBI Driver	6
2.3.3	Install PMIC Driver	6
2.3.4	Install Audio Driver.....	6
2.3.5	Install Intel® HD Graphics Driver	6
2.3.6	Install Camera Driver.....	7
2.3.7	Install NFC Driver.....	7
2.3.8	Install Intel® Dynamic Platform and Thermal Framework (Intel® DPTF) Driver.....	7
Appendix A	Driver Package Information	8



1 Introduction

All the software components used should match the ones detailed in the BKC (Best Known Configuration) for this release (Doc Number: 512138).

§



2 *Driver Installation Steps*

2.1 Installation Preparation

Before starting driver installation, install a clean Windows* 8.1 32-bit on the target machine, and copy the complete driver package onto it.

Two installation methods are provided in this package: Master Installer and script files. Please follow the instructions below to complete the driver installation.

2.2 Driver Installation – Master Installer

2.2.1 Install Platform Driver

- i. Double click setup.exe under the folder "Installer\PlatformInstaller"
- ii. Follow the instructions on screen to complete the installation
- iii. Reboot

2.2.2 Install Security Services (Optional)

This installer is only required before installing advanced security applications (such as Intel® Anti-Theft Technology)

- i. Double click setupTXE.exe under the folder "Installer\SecInstaller"
- ii. Follow the instructions on screen to complete the installation
- iii. Reboot



2.3 Driver Installation – Script Files

2.3.1 Install IO Driver

- i. Open CMD as administrator
- ii. Run batch file: “Install_IO_Drivers.bat” under the folder “Script”, it will install the following drivers:
 - I2C driver
 - GPIO driver
 - UART driver
 - SPI driver
 - Virtual GPIO driver
- iii. Reboot

2.3.2 Install MBI Driver

- i. Open CMD as administrator
- ii. Run batch file: “Install_MBI_Driver.bat” under the folder “Script”
- iii. Reboot

2.3.3 Install PMIC Driver

- i. Open CMD as administrator
- ii. Run batch file: “Install_PMIC_Driver.bat” under the folder “Script”
- iii. Reboot

2.3.4 Install Audio Driver

- i. Open CMD as administrator
- ii. Run batch file: “Install_Audio_Driver.bat” under the folder “Script”
- iii. Reboot

2.3.5 Install Intel® HD Graphics Driver

- i. Open CMD as administrator
- ii. Run batch file: “Install_Graphics_Driver.bat” under the folder “Script”
- iii. Reboot



2.3.6 Install Camera Driver

- i. Open CMD as administrator
- ii. Run batch file: "Install_Camera_Driver.bat" under the folder "Script"
- iii. Reboot

2.3.7 Install NFC Driver

- i. **Make sure Sec enabled FW is flashed**
- ii. Open CMD as administrator
- iii. Run batch file: "Install_NFC_Driver.bat" under the folder "Script"
- iv. Reboot

2.3.8 Install Intel® Dynamic Platform and Thermal Framework (Intel® DPTF) Driver

- i. Open CMD as administrator
- ii. Run batch file: "Install_DPTF_Driver.bat" under the folder "Script"
- iii. Reboot

§



Appendix A Driver Package Information

Driver Folder Name	Description
Installer\SecInstaller	Intel® Trusted Execution Engine Interface (Intel® TXEI) driver package, including security services, such as iCLS
Installer\PlatformInstaller\Drivers\I2C	I2C driver package
Installer\PlatformInstaller\Drivers\GPIO	GPIO driver package
Installer\PlatformInstaller\Drivers\UART	UART driver package
Installer\PlatformInstaller\Drivers\SPI	SPI driver package
Installer\PlatformInstaller\Drivers\GPIOVirtual	GPIO virtual driver package
Installer\PlatformInstaller\Drivers\MBI	MBI driver package
Installer\PlatformInstaller\Drivers\PMIC	PMIC driver package
Installer\PlatformInstaller\Drivers\Audio	Audio driver package
Installer\PlatformInstaller\Drivers\Camera	Camera driver package
Installer\PlatformInstaller\Drivers\TXEI	Intel® TXEI driver package
Installer\PlatformInstaller\Drivers\NFC	NFC driver package
Installer\PlatformInstaller\Drivers\DPTF	Intel® DPTF driver package
Script	Installation script files
SPI Image\GOP	GOP driver package
SPI Image\Image	BIOS image file

[§](#)