




# How to upgrade P9D-MV BIOS from version 0603 to 0704 completely

Items MUST prepare :


- CAP BIOS file. (P9D-MV-ASUS-0704.CAP)
- USB flash drive.

Update SOP :


1. **AC OFF (Un-plug the PSU)** & change the ME jumper (FDO1) from pin 1-2 to pin 2-3.

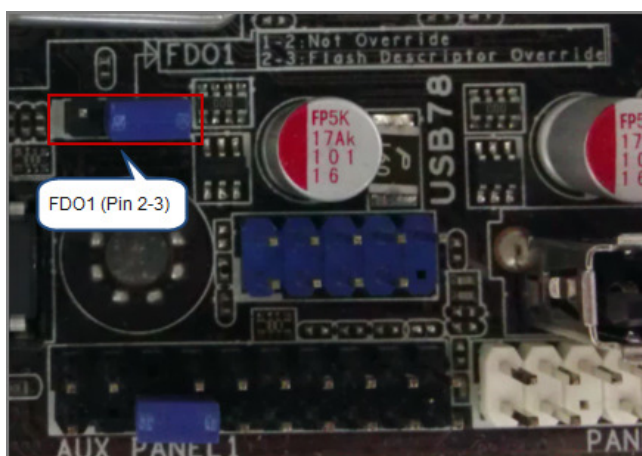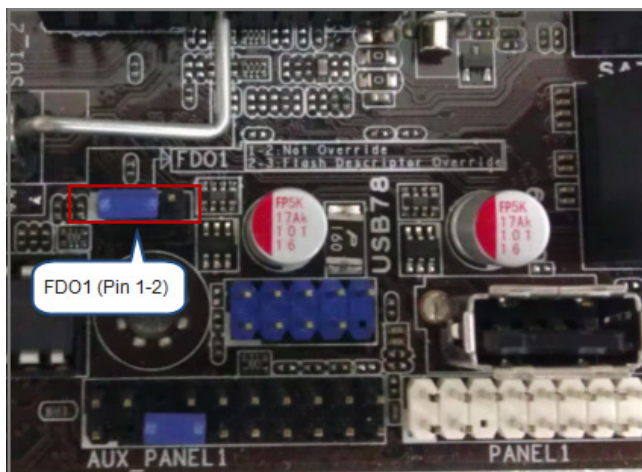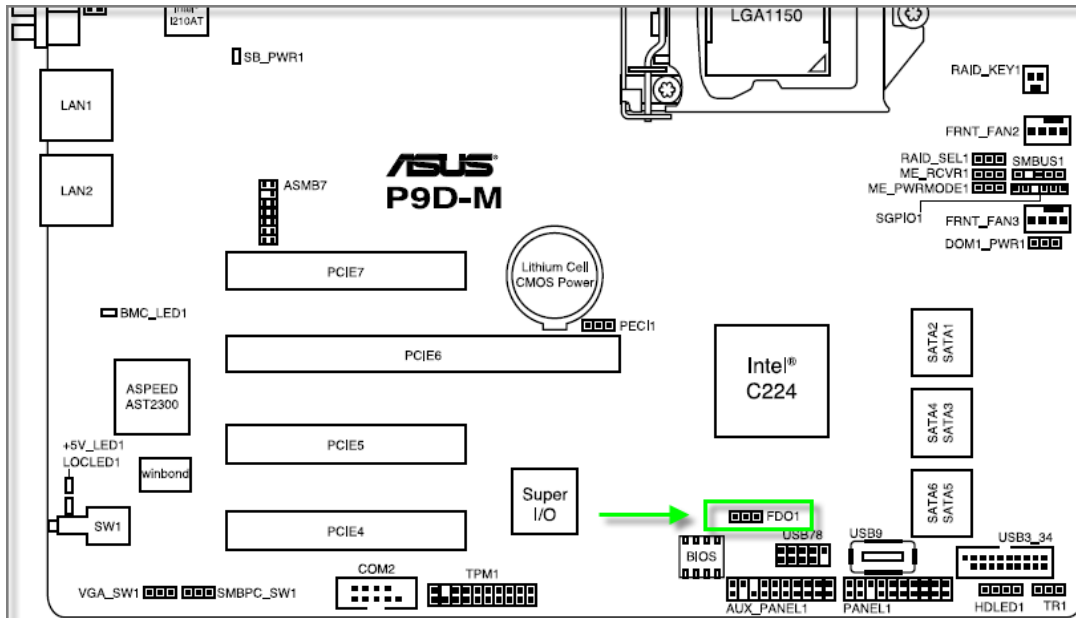

2. Power on the system and update BIOS from version 0603 to 0704 via EZFlash utility.
- Pls noted that before u start updating BIOS, the screen will stay on this pic for a while.

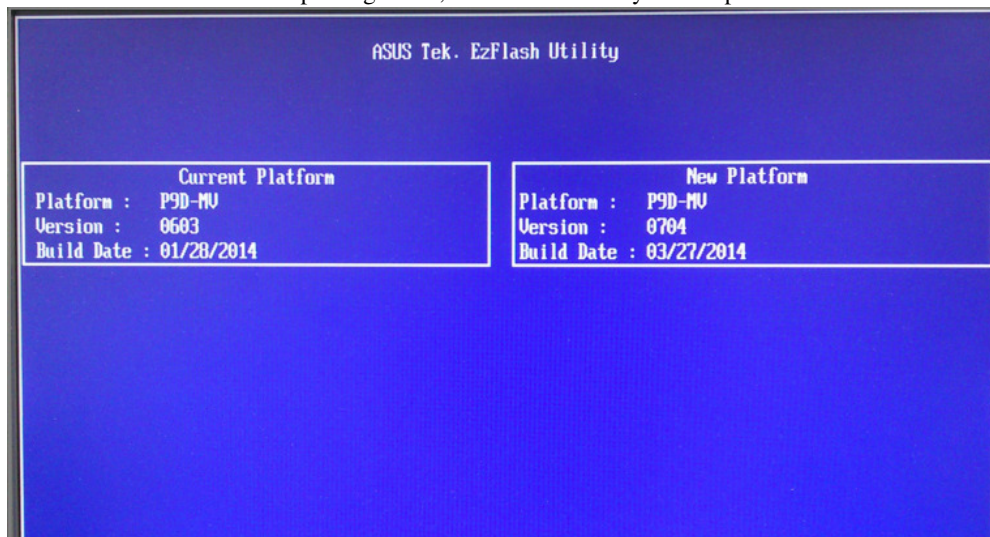

- Start to update BIOS.

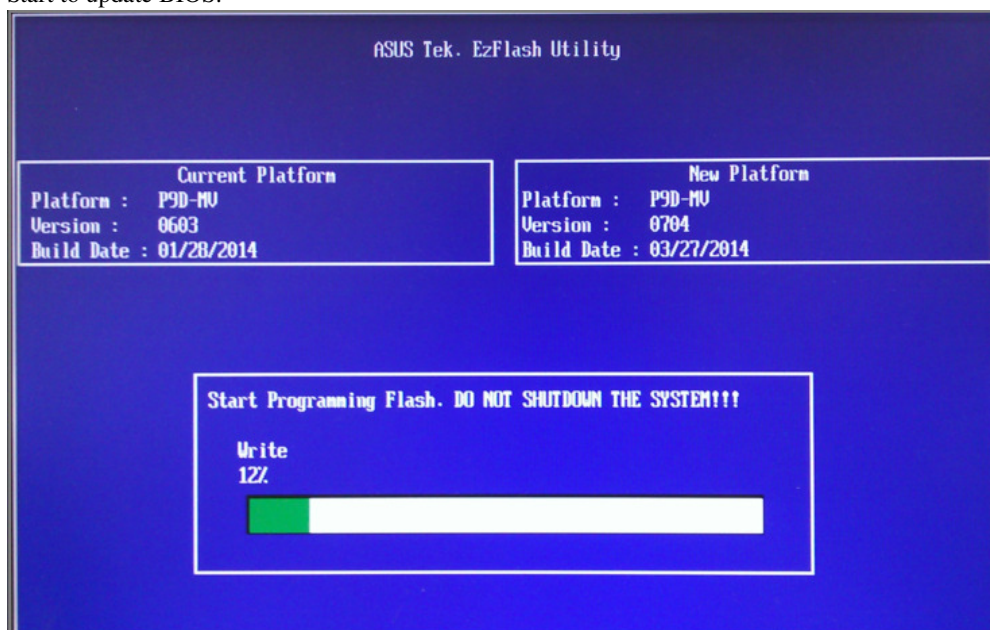

3. After updating BIOS successfully, press Enter to reboot the system.  
Once you see the screen, pls doing **AC OFF (Un-plug the PSU)** again & place MB jumper (FDO1) from pin 2-3 to pin1-2.
4. Power on the system and go into the BIOS setup menu to check the ME status.  
BIOS path : Advanced → Intel Server Platform Services → ME FW SKU Information.

